


Hydraulic station

VWZ MEH 97/6

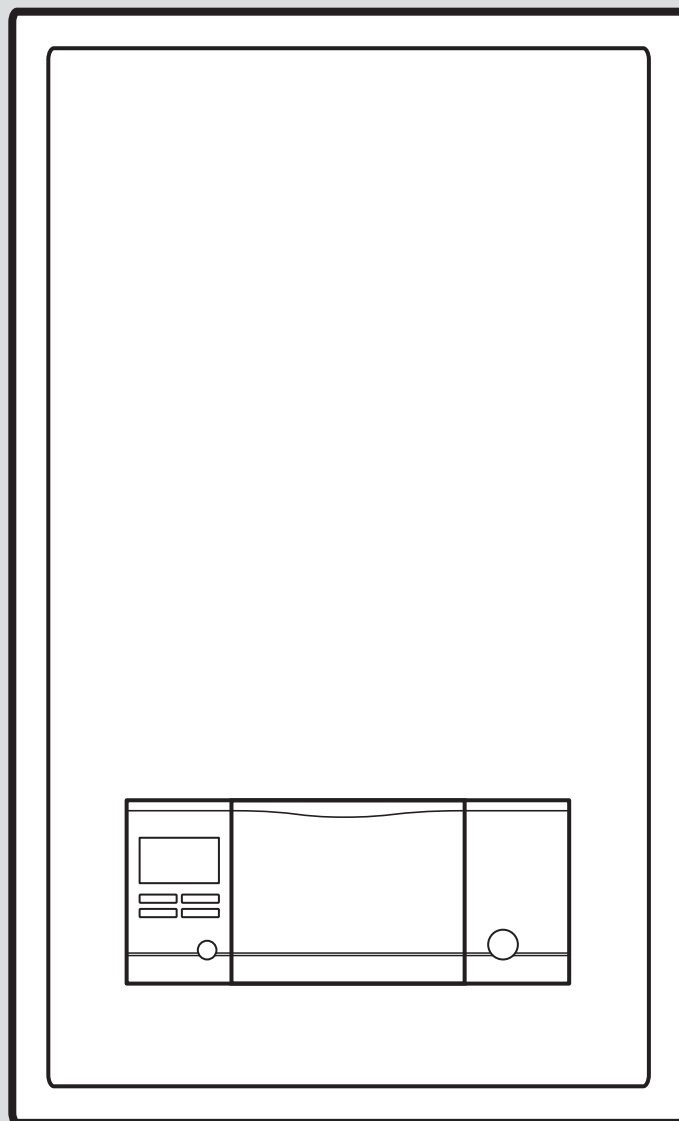

en **Operating instructions 3**
en **Installation and maintenance instructions..... 15**

Operating instructions

Contents

1	Safety	4
1.1	Intended use	4
1.2	General safety information	4
2	Notes on the documentation	6
3	Product description	6
3.1	Heat pump system	6
3.2	Design of the product	6
3.3	Control elements	6
3.4	Control panel	7
3.5	Description of the symbols	7
3.6	Functional description of buttons	7
3.7	Type designation and serial number	8
3.8	CE marking	8
3.9	Safety devices	8
4	Operation	8
4.1	Basic display	8
4.2	Operating concept	8
4.3	Menu display	8
4.4	Starting up the product	9
4.5	Setting the heating flow temperature	10
4.6	Setting the domestic hot water temperature	10
4.7	Switching off the product's functions	10
5	Care and maintenance	11
5.1	Caring for the product	11
5.2	Maintenance	11
5.3	Reading maintenance messages	11
5.4	Checking the filling pressure of the heating installation	11
6	Troubleshooting	11
6.1	Reading fault messages	11
6.2	Detecting and eliminating faults	11
7	Decommissioning	11
7.1	Temporarily decommissioning the product	11
7.2	Permanently decommissioning the product	12
8	Recycling and disposal	12
9	Guarantee and customer service	12
9.1	Guarantee	12
9.2	Customer service	12
Appendix	13	
A	Troubleshooting	13
B	Overview of the end user level	13



1 Safety

1.1 Intended use

There is a risk of injury or death to the user or others, or of damage to the product and other property in the event of improper use or use for which it is not intended.

This product is a system component for controlling the heating circuits and domestic hot water generation in conjunction with a heat pump using a system control.

Intended use includes the following:

- observance of the operating instructions included for the product and any other installation components
- compliance with all inspection and maintenance conditions listed in the instructions.

The product is intended exclusively for domestic use.

The intended use only allows for these product combinations:

Outdoor unit	Indoor unit
VWL ..5/6 A ..	VIH QW 190/6...
	VWZ MEH 97/6

This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children must not play with the product. Cleaning and user maintenance work must not be carried out by children unless they are supervised.

Any other use that is not specified in these instructions, or use beyond that specified in this document, shall be considered improper use. Any direct commercial or industrial use is also deemed to be improper.

Caution.

Improper use of any kind is prohibited.

1.2 General safety information

1.2.1 Danger caused by improper operation

Improper operation may present a danger to you and others, and cause material damage.

- ▶ Carefully read the enclosed instructions and all other applicable documents, particularly the "Safety" section and the warnings.
- ▶ Only carry out the activities for which instructions are provided in these operating instructions.

1.2.2 Risk of death due to changes to the product or the product environment

- ▶ Never remove, bridge or block the safety devices.
- ▶ Do not tamper with any of the safety devices.
- ▶ Do not damage or remove any tamper-proof seals on components.
- ▶ Do not make any changes:
 - The product itself
 - The water and electricity supply lines
 - to the expansion relief valve
 - to the drain pipework
 - to constructional conditions that may affect the operational reliability of the product

1.2.3 Risk of injury and material damage due to maintenance and repairs carried out incorrectly or not carried out at all

- ▶ Never attempt to carry out maintenance work or repairs on your product yourself.
- ▶ Faults and damage should be immediately eliminated by a competent person.
- ▶ Adhere to the maintenance intervals specified.

1.2.4 Risk of material damage caused by frost

- ▶ Ensure that the heating installation always remains in operation during freezing conditions and that all rooms are sufficiently heated.
- ▶ If you cannot ensure the operation, have a competent person drain the heating installation.



1.2.5 Benchmark



Vaillant is a licensed member of the Benchmark Scheme which aims to improve the standards of installation and commissioning of domestic heating and hot water systems in the UK and to encourage regular servicing to optimise safety, efficiency and performance.

Benchmark is managed and promoted by the Heating and Hotwater Industry Council. For more information visit www.benchmark.org.uk.

- Please ensure that the installer has fully completed the Benchmark Checklist on the inside back pages of the installation instructions supplied with the product and that you have signed it to say that you have received a full and clear explanation of its operation. The installer is legally required to complete a commissioning checklist as a means of complying with the appropriate Building Regulations (England and Wales).

All installations must be notified to Local Area Building Control either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer who should, on receipt, write the Notification Number on the Benchmark Checklist.

This product should be serviced regularly to optimise its safety, efficiency and performance. The service engineer should complete the relevant Service Record on the Benchmark Checklist after each service.

The Benchmark Checklist will be required in the event of any warranty.

2 Notes on the documentation

- Always observe all operating instructions that are enclosed with the installation components.
- Store these instructions and all other applicable documents for further use.

These instructions apply only to:


Product
VWZ MEH 97/6

Product
VIH QW 190/6 E GB

3 Product description


3.1 Heat pump system

Design of a typical heat pump system with monoblock technology:

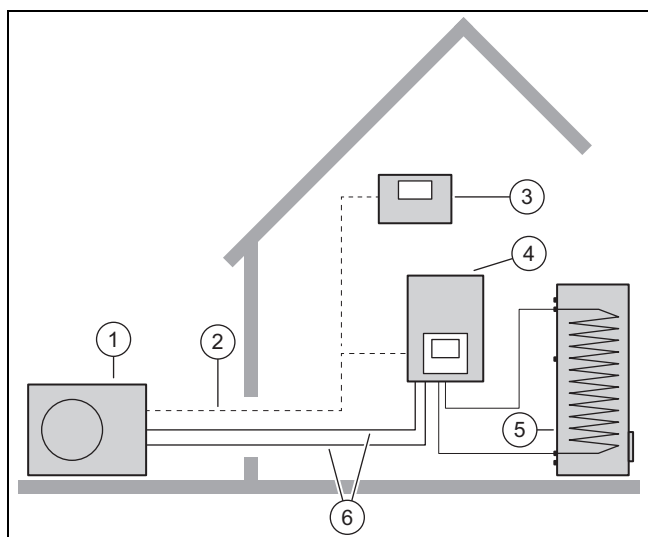


- | | |
|------------------|-------------------------------|
| 1 Outdoor unit | 4 Indoor unit |
| 2 eBUS line | 5 Domestic hot water cylinder |
| 3 System control | 6 Heating circuit |

3.2 Design of the product

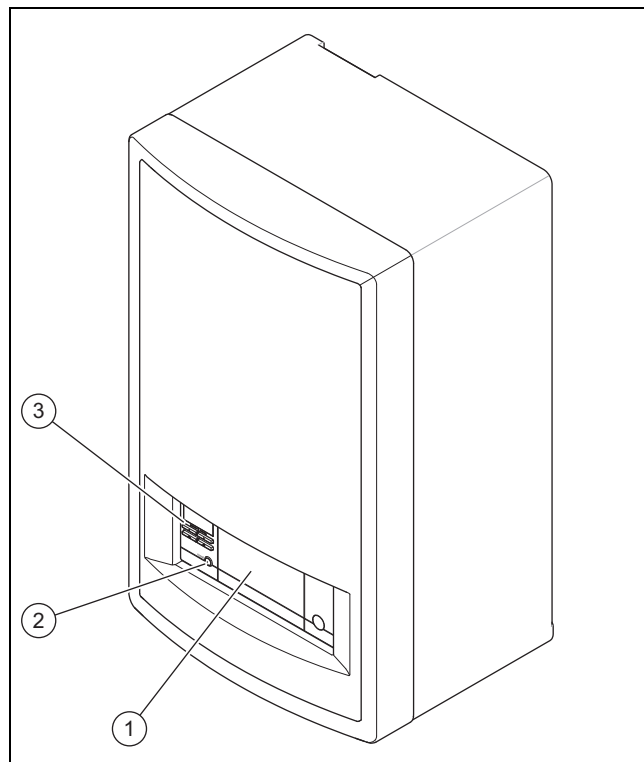


- | | |
|---|--------------------|
| 1 Optional installation site for the system control | 2 Reset button |
| | 3 Control elements |

3.3 Control elements

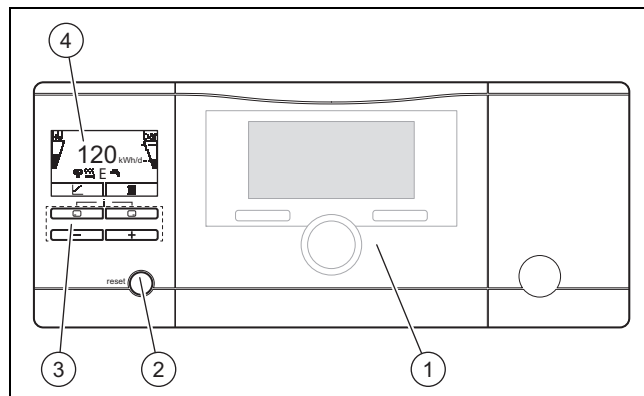

- | | |
|---------------------------------------|-----------------|
| 1 System control (optional accessory) | 3 Control panel |
| 2 Reset button | 4 Display |

3.4 Control panel

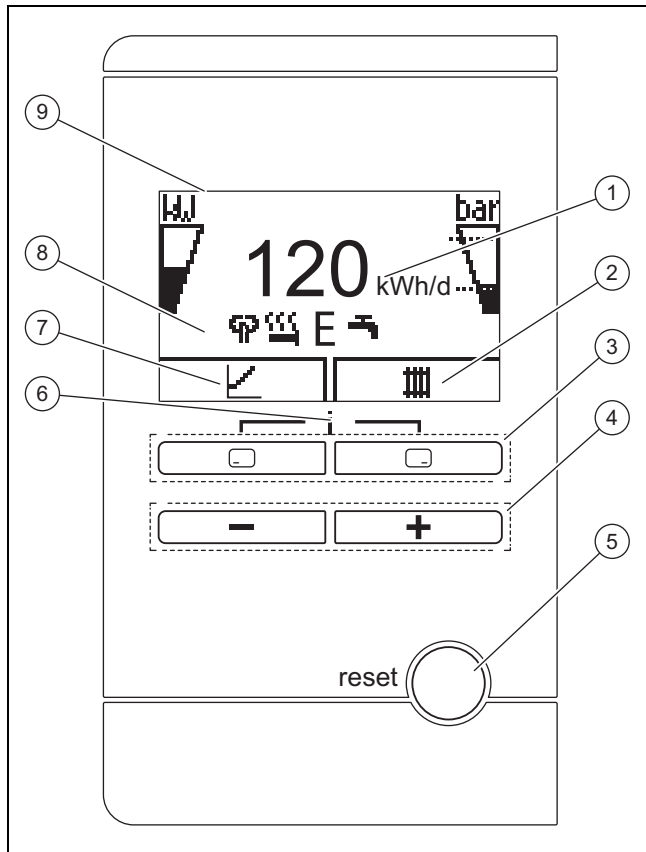

- | | | | |
|---|--|---|---|
| 1 | Displays the daily environmental energy yield | 6 | Access to the menu for additional information |
| 2 | Display of the current assignment of the right-hand selection button | 7 | Display of the current assignment of the left-hand selection button |
| 3 | Left- and right-hand selection buttons | 8 | Displays the symbols for the heat pump's current operating mode |
| 4 | [-] and [+] button | 9 | Display |
| 5 | Reset button, restart the product | | |

3.5 Description of the symbols

If you do not press any buttons within one minute, the lighting goes out.

Symbol	Meaning	Explanation
	Compressor power	- Not filled: Compressor not in operation - Partially filled: Compressor in operation. Partial load mode. - Fully filled: Compressor in operation. Full load mode.

Symbol	Meaning	Explanation
	- Without decoupling module - Filling pressure in the building circuit (measured in the outdoor unit) - With decoupling module - Filling pressure in the building circuit (measured in the indoor unit)	The dashed lines show the permitted range. - Displayed statically: Filling pressure in the permitted range - Displayed flashing: Filling pressure outside of the permitted range
	Noise reduction mode	Operation with reduced noise emissions
	Electric back-up heater	- Displayed flashing: Electric back-up heater in operation - Displayed together with the "Heating mode" symbol: Electric back-up heater active for heating mode - Displayed together with the "Domestic hot water generation" symbol: Electric back-up heater active for domestic hot water mode
	eco mode	Energy-saving domestic hot water mode
	Heating mode	Heating mode active
	Domestic hot water generation	Domestic hot water mode active
	Cooling mode	Cooling mode active
	Fault condition	Appears instead of the basic display, may be an explanatory plain text display

3.6 Functional description of buttons

The two selection buttons are soft keys, meaning that they can be assigned different functions.

Button	Meaning
	- Cancelling the change to a set value or activating an operating mode - Calling up a higher selection level in the menu
	- Confirming a set value or activating an operating mode - Calling up a lower selection level in the menu
	Calling up the additional functions

Button	Meaning
 or 	– Navigating between individual menu items – Increasing or decreasing the chosen set value

Adjustable values flash in the display.

You must always confirm a change to a value. Only then is the new setting saved. You can press  to cancel a process at any time. If you do not press any buttons for longer than 15 minutes, the display returns to the basic display.

3.7 Type designation and serial number

The type designation and serial number are on the data plate.

3.8 CE marking



The CE marking shows that the products comply with the basic requirements of the applicable directives as stated on the declaration of conformity.

The declaration of conformity can be viewed at the manufacturer's site.

3.9 Safety devices

3.9.1 Frost protection function

The frost protection function for the system is controlled using the product itself or using the optional system control. If the system control fails, the product guarantees limited frost protection for the heating circuit.

At negative outdoor temperatures, there is an increased risk of the heating water freezing if a heat pump fault occurs, e.g. due to a power cut or a defective compressor.

3.9.2 Low-water pressure protection

This function continuously monitors the heating water pressure in order to prevent a possible loss of heating water.

3.9.3 Freeze protection

This function prevents the unit's internal heating circuit from freezing when the heating flow temperature drops below a certain value.

If the heating flow temperature of the outdoor unit falls below 4 °C, the compressor is switched on in order to increase the heating flow temperature.

3.9.4 Pump blocking protection

This function prevents the pumps for heating water from sticking. The pumps, which were out of operation for 23 hours, are switched on for 10–20 seconds, one after the other.


3.9.5 Safety cut-out (SCO) in the heating circuit

If the temperature in the heating circuit of the internal electric back-up heater exceeds the maximum temperature, the safety cut-out shuts down the electric back-up heater as a securing measure. After it is triggered, the safety cut-out must be replaced.

- Max. heating circuit temperature: 89 °C

4 Operation

4.1 Basic display

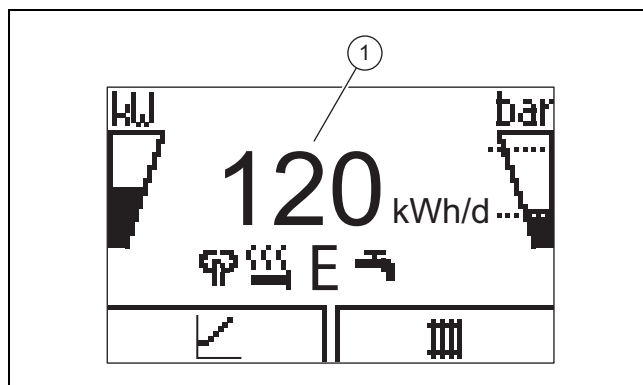

The displays shows the basic display with the current status of the product. The daily energy yield (1) is displayed in the centre of the display.

If you press a selection button, the activated function is displayed in the display.

As soon as a fault message is present, the basic displays switches to the fault message.

4.2 Operating concept


The product has two operating levels.

The operating level for the end user shows the most important information and offers setting options which do not require any special prior knowledge.

The operating level for the competent person is reserved for the competent person and is protected by a code.

Overview of the end user level (→ Appendix B)

4.3 Menu display

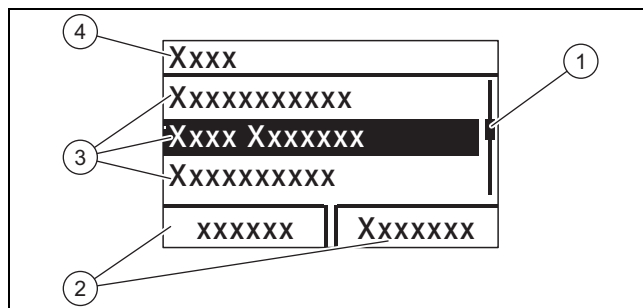

- | | | | |
|---|---|---|------------------------------|
| 1 | Scroll bar | 3 | Selection level list entries |
| 2 | Current assignment of the selection buttons | 4 | Selection level |



Note

Path details at the start of a section specify how to access this function, e.g. **Menu → Information → Contact details**.

4.4 Starting up the product

4.4.1 Opening the isolators

1. Ask the competent person who installed the product to explain to you where these isolators are located and how to handle them.
2. If installed, open the service valves in the heating installation's flow and return.
3. Open the cold-water isolation valve.

4.4.2 Switching on the product



Note

The product does not have an on/off switch. The product is switched on and ready for operation as soon as it is connected to the power grid. It can only be switched off using the partition that is installed on-site, e.g. fuses or circuit breaker in the utility connection box.

1. Ensure that the product casing has been installed.
2. Switch on the product via the fuses in the utility connection box.
 - ◁ The "basic display" is shown in the product's operating display.
 - ◁ The "basic display" may also be shown in the display for the optional system control.

4.4.3 Adjusting the target cylinder temperature



Danger!

Risk of death from legionella.

Legionella multiply at temperatures below 60 °C.

- Have a competent person inform you about the measures that should be taken to protect against Legionella in your installation.
- Do not set any water temperatures below 60 °C without consulting the competent person first.



Danger!

Risk of death from legionella!

If you decrease the cylinder temperature, the risk of legionella spreading increases.

- Activate the anti-legionella times in the system control and set them.

Depending on the source of the energy obtained from the environment, target cylinder temperatures of up to 70 °C can be reached with the compressor. In order to achieve energy-efficient domestic hot water generation predominantly from the energy extracted from the environment, the factory setting for the desired domestic hot water temperature must be adjusted on the optional system control and/or on the heat pump's control panel.

Condition: System control connected

- To do this, adjust the target cylinder temperature (**Desired DHW circuit temperature**) to between 50 and 55 °C.
- Also switch on the electric back-up heater for the domestic hot water generation so that, also at outdoor temperatures below -10 °C and above +30 °C, the required 60 °C can be achieved for the anti-legionella function time programme.

Condition: No system control connected

- To do this, set the target cylinder temperature (**domestic hot water target cylinder temp.**) to 65 °C.



Note

If no system control is connected, the time programme for the anti-legionella function is not available. To still ensure anti-legionella function, the target cylinder temperature must therefore be set higher.

- Also switch on the electric back-up heater for the domestic hot water generation so that, at outdoor temperatures below -10 °C and above +30 °C, the required 60 °C can also be achieved for the anti-legionella function.

4.4.4 Display of the energy consumption, energy yields and efficiencies

The product, the system control and the app show approximate values for energy consumption, energy yields and efficiencies, which are extrapolated based on calculation algorithms.

The values that are displayed in the app may differ from the other display options due to staggered transfer intervals.

The determined values depend on:

- Installation and system of the heating installation
- User behaviour
- Seasonal weather effects
- Various tolerances of unit-internal components

The recording of the values only includes the product in the factory-delivered condition. Supplementary accessories, even if they are installed on the product, as well as any other components in the heating system and other external consumers, are not part of the data recording.

Deviations between the determined values and the actual values may be significant. The determined values are therefore not suitable for creating or comparing energy billing, for example.

When replacing the PCB, the values for energy consumption, energy yields and efficiencies are reset in the heat pump's control panel.

4.4.5 Displaying the Live Monitor

Menu → Live Monitor

You can use the Live Monitor to view the current status of the product.

4.4.6 Displaying the building circuit pressure

Menu → Live Monitor → Building circuit pressure

You can use this function to display the current filling pressure of the heating installation.

4.4.7 Reading the operating statistics

Menu → Information → Heating op. hours

Menu → Information → DHW operating hours

Menu → Information → Cooling op. hours

Menu → Information → Total operating hours

You can use this function to display the operating hours for heating mode, for domestic hot water mode, for cooling mode and for overall operation.

4.4.8 Setting the language

1. If you want to set another language, press **and hold**  and  **at the same time**.
2. Also press the reset button for a short time.
3. **Press and hold**  and  until the display shows the language setting.
4. Select the required language by pressing  or .
5. Press (OK) to confirm your selection.
6. Once you have set the correct language, press (OK) again to confirm this.

4.4.9 Set display contrast

Menu → Basic settings → Display contrast

- ▶ You can set the contrast here.

4.4.10 Serial number and article number

Menu → Information → Serial number

The product's serial number is displayed.

The article number is found in the second line of the serial number.

4.4.11 Contact details for the competent person

Menu → Information → Contact data Phone number

If the competent person has entered their telephone number during the installation, you can read it here.

4.5 Setting the heating flow temperature

Condition: No system control connected

- ▶ Press  in the basic display.
- ▶ Use  or  to change the value and confirm this.

Condition: System control connected

- ▶ Set the heating flow temperature on the system control, → System control operating instructions.

4.6 Setting the domestic hot water temperature

Condition: No system control connected

- ▶ Press  in the basic display.
- ▶ Use  or  to change the value and confirm this.

Condition: System control connected

- ▶ Set the domestic hot water temperature on the system control, → System control operating instructions.

4.7 Switching off the product's functions

4.7.1 Frost protection function



Caution.

Risk of material damage due to frost.

The frost protection function cannot guarantee circulation through the entire heating installation. Under certain circumstances, there is therefore a risk of frost to certain parts of the heating installation, which may cause damage.

- ▶ During a period of frost, ensure that the heating installation remains in operation and that all rooms are sufficiently heated, even when you are away.
- ▶ It is strongly recommended that antifreeze is used for filling those parts of the installation which are at risk of frost.

To ensure that the frost protection devices are permanently ready for operation, you must leave the system switched on.

Another way to protect the heating installation and the product from frost for very long switch-off periods is to drain them completely.

- ▶ Consult a competent person about this.

4.7.2 Switching off heating mode (Summer mode)

Condition: No system control connected

- ▶ Press  in the basic display.
- ▶ Use  to change the value to zero and confirm this.

Condition: System control connected

- ▶ Switch off heating mode on the system control (summer mode), → System control operating instructions.

4.7.3 Switching off domestic hot water generation

Condition: No system control connected

- ▶ Press  in the basic display.
- ▶ Use  to set the value to zero and confirm this.

Condition: System control connected

- ▶ Switch off the domestic hot water generation at the system control (→ System control operating instructions).

5 Care and maintenance

5.1 Caring for the product

- Clean the casing with a damp cloth and a little solvent-free soap.
- Do not use sprays, scouring agents, detergents, solvents or cleaning agents that contain chlorine.

5.2 Maintenance

An annual inspection of the product carried out by a competent person is a prerequisite for ensuring that the product is permanently ready and safe for operation, reliable, and has a long working life.

5.3 Reading maintenance messages

If the  symbol is shown in the display, the product requires maintenance work or the product is in restricted mode (comfort protection). The product is not in fault mode; it continues to operate.

- Consult a competent person.

Condition: Lhm. 37 is displayed

The product is in Comfort protection mode. The product has detected a permanent fault and continues to run with restricted comfort.

5.4 Checking the filling pressure of the heating installation



Note

To avoid operating the installation with insufficient water volume and to prevent possible damage associated with this, the product is fitted with a pressure sensor and a digital pressure display.

To ensure that the heating installation operates properly, the filling pressure must be between 0.1 MPa and 0.15 MPa (1.0 bar and 1.5 bar) when the heating installation condition is cold.

If the heating installation extends over several storeys, a higher filling pressure may be required for the heating installation. Ask a competent person for details.



Note

If the pressure falls below 0.07 MPa (0.7 bar), message M32 appears.

If the pressure rises above 0.07 MPa (0.7 bar), message M32 goes out.

In addition, the  symbol is displayed after approx. one minute.

If the filling pressure of the heating installation falls below 0.05 MPa (0.5 bar) for longer than one minute, fault message F.22 and the current filling pressure appear alternately in the display.

If the blocking time has elapsed or if the filling pressure of the heating installation rises above 0.05 MPa (0.5 bar), fault message F.22 goes out.

1. Use **Menu → Live Monitor Water pressure** to display the filling pressure of the heating installation.
2. If the pressure drops frequently, identify and eliminate the reason for the pressure loss of heating water. Inform a competent person of this.

6 Troubleshooting

6.1 Reading fault messages

Fault messages have priority over all other displays and are shown on the display instead of the basic display. If several faults occur at the same time, these are displayed alternately for two seconds each.

Depending on the type of fault, the system can work in limp home mode in order to maintain the heating mode or domestic hot water generation.

F.723 Building circuit: Pressure too low

If the filling pressure falls below the minimum pressure, the heat pump will be switched off automatically.

- Inform your competent person so that he can top up the heating water.

F.1120 Immersion heater: Phase failure

The product has an internal circuit breaker which switches off the heat pump in the event of short circuits or the failure of one (product with 230 V power supply) or several (product with 400 V power supply) current-carrying phases.

If the electric back-up heater is defective, the anti-legionella function is not always guaranteed.

- Inform your competent person so that they can eliminate the fault and reset the internal circuit breaker.

6.2 Detecting and eliminating faults

- If problems occur whilst operating the product, you can carry out certain checks with the aid of the table. Troubleshooting (→ Appendix A)
- If the product is not functioning correctly, even though you have checked the points listed in the table, contact a competent person.

7 Decommissioning

7.1 Temporarily decommissioning the product

- Use the partition that is installed on-site (e.g. fuses or power switches) to disconnect the product from the power supply.

7.2 Permanently decommissioning the product

- ▶ Have a competent person permanently decommission and dispose of the product.

8 Recycling and disposal

Disposing of the packaging

- ▶ The competent person who installed your product is responsible for the disposal of the packaging.

Disposing of the product



■ If the product is labelled with this mark:

- ▶ In this case, do not dispose of the product with the household waste.
- ▶ Instead, hand in the product to a collection centre for waste electrical or electronic equipment.

Disposing of batteries



■ If the product contains batteries that are labelled with this mark:

- ▶ In this case, dispose of the batteries at a collection point for batteries.
 - ◁ **Prerequisite:** The batteries can be removed from the product without causing any destruction. Otherwise, the batteries are disposed of together with the product.
- ▶ In accordance with the legal regulations, used batteries must be returned since batteries may contain substances that are harmful to health and the environment.

9 Guarantee and customer service

9.1 Guarantee

Vaillant provides a full parts and labour guarantee for this appliance for the duration as shown on the enclosed registration card which must be fully completed and returned within 30 days of installation. All appliances must be installed by a suitably competent person fully conversant and in accordance with all current regulations applicable to the appliance type installation. In the case of gas appliances the Gas Safety (Installation and Use) Regulations 1998, and the manufacturer's instructions. In the UK competent persons approved at the time by the Health and Safety Executive undertake the work in compliance with safe and satisfactory standards. Installers should also be fully conversant with and competent with all necessary electrical and building regulations that may apply to the installation.

In addition all unvented domestic hot water cylinders must be installed by a competent person to the prevailing building regulations at the time of installation (G3). All appliances shall be fully commissioned in accordance with our installation manual and Benchmark commissioning check list (this will be included within the installation manual). These must be signed and given to the user for safe keeping during the hand over process. Installers should also at this time advise the user of the annual servicing requirements and advise of appropriate service agreement.

Terms and conditions do apply to the guarantee, details of which can be found on the registration card included with this

appliance. In order to qualify for guarantee after one year the appliance must be serviced in accordance with our installation manual servicing instructions. The benchmark service history should be completed. Note - all costs associated with this service are excluded from this guarantee.

Failure to install and commission this appliance in compliance with the manufacturer's instructions will invalidate the guarantee (this does not affect the customer's statutory rights).

9.2 Customer service

The contact details for our customer service are provided on the back page or on our website.

Appendix

A Troubleshooting

Problem	Possible cause	Remedy
No domestic hot water, heating remains cold; product does not start up	Building power supply switched off	Switch on building power supply
	Domestic hot water or heating set to "off"/domestic hot water temperature or target temperature set too low	Ensure that domestic hot water mode and/or heating mode is activated in the system control. Set the domestic hot water temperature in the system control to the required value.
	Air in the heating installation	Purging the radiators If the problem occurs again: Inform the competent person
Domestic hot water mode without any problems; heating does not start	No heat requirement via the control	Check the timer programme on the control and correct if necessary Check the room temperature and, if required, correct the target room temperature (→ Control operating instructions)

B Overview of the end user level

Setting level	Values		Unit	Increment, select	Factory setting	Setting
	Min.	Max.				
Basic display → Right-hand selection button						
Room temperature setpoint *	Current value		°C			
Manual cooling demand*						
Basic display → Left-hand selection button						
Domestic hot water cylinder target temperature*	Current value		°C			
Actual domestic hot water cylinder temperature	Current value		°C			
Yield indicator →						
Energy yield: Day, Heating	Cumulative value		kWh			
Energy yield: Day, Domestic hot water	Cumulative value		kWh			
Energy yield: Day, Cooling	Cumulative value		kWh			
Energy yield: Month, Heating	Cumulative value		kWh			
Working figure: Month, Heating	Cumulative value					
Energy yield: Total, Heating	Cumulative value		kWh			
Working figure: Total, Heating	Cumulative value					
Energy yield: Month, Cooling	Cumulative value		kWh			
SEER, month, cooling	Cumulative value					
Energy yield: Total, Cooling	Cumulative value		kWh			
SEER, total, cooling	Cumulative value					
Energy yield: Month, Domestic hot water	Cumulative value		kWh			
Working figure: Month, Domestic hot water	Cumulative value					
Energy yield: Total, Domestic hot water	Cumulative value		kWh			
Working figure: Total, Domestic hot water	Cumulative value					
Total energy consumption	Cumulative value		kWh			
Live Monitor →						
Current status message(s)	Current value					
Building circuit water pressure	Current value		bar			
*If no system control is installed, the menu item is displayed in the product's control panel.						

Setting level	Values		Unit	Increment, select	Factory setting	Setting
	Min.	Max.				
Building circuit flow rate	Current value		l/h			
Compressor anti-cycling time	Current value		min			
Immersion heater anti-cycling time	Current value		min			
Target flow temp.	Current value		°C			
Current flow temp.	Current value		°C			
Energy integral	Current value		°min			
Cooling capacity	Current value		kW			
Electrical power consumption	Current value		kW	Total power consumption of the heat pump without any external components connected (as supplied).		
Compressor modulation	Current value		%			
Air inlet temperature	Current value		°C			
Immersion heater power	Current value		kW			
External current anode status	Current value				Anode not connected	
Outdoor temperature	Current value		°C			
Information →						
Contact details	Phone number					
Serial number	Permanent value					
Operating hours total	Cumulative value		h			
Hours heating	Cumulative value		h			
DHW operating hours	Cumulative value		h			
Cooling op. hours	Cumulative value		h			
Default settings →						
Language	Current language			Languages available for selection	02 English	
Display contrast	Current value			1	25	
	15	40				
Resets →						
No sub-items available						
*If no system control is installed, the menu item is displayed in the product's control panel.						

Installation and maintenance instructions

Contents

1	Safety	17	6.11	Opening the control PCB's electronics box	29
1.1	Intended use	17	6.12	Routing the cables in the electronics box	29
1.2	General safety information	17	6.13	Carrying out the wiring	30
1.3	Regulations (directives, laws, standards)	18	6.14	Connecting the circulation pump	30
2	Notes on the documentation	19	6.15	Connecting a limit thermostat for the underfloor heating	30
2.1	Further information	19	6.16	Actuating a circulation pump with an eBUS control	30
3	Product description	19	6.17	Connecting the outdoor temperature sensor	31
3.1	Heat pump system	19	6.18	Connecting the domestic hot water cylinder's temperature sensor	31
3.2	Safety devices	19	6.19	Connecting the VR 70/VR 71 mixer module	31
3.3	Product overview	20	6.20	Connecting cascades	31
3.4	Serial number	21	6.21	Closing the electronics box for the power supply PCB	31
3.5	Information on the data plate	21	6.22	Checking the electrical installation	31
3.6	Connection symbols	21	7	Operation	31
3.7	CE marking	21	7.1	Operating concept of the product	31
3.8	Cooling mode	21	8	Start-up	31
3.9	Display of the energy consumption, energy yields and efficiencies	21	8.1	Prioritising diverter valve, setting the heating circuit/cylinder charging	31
4	Set-up	22	8.2	Checking and treating the heating water/filling and supplementary water	32
4.1	Unpacking the product	22	8.3	Filling and purging the heating installation	32
4.2	Checking the scope of delivery	22	8.4	Purging	33
4.3	Selecting the installation site	22	8.5	Switching on the product	33
4.4	Permissible height difference between the outdoor unit and the indoor unit	22	8.6	Running the installation assistants	33
4.5	Dimensions	22	8.7	Menu functions without the optional system control	34
4.6	Minimum clearances and installation clearances	23	8.8	Energy balance control	34
4.7	Wall-mounting the product	23	8.9	Compressor hysteresis	34
4.8	Removing the front casing	24	8.10	Enabling the electric back-up heater	34
5	Hydraulics installation	24	8.11	Setting the anti-legionella function	34
5.1	Carrying out the installation preparations	24	8.12	Purging	34
5.2	Connecting the heat pump to the indoor unit	24	8.13	Calling up the installer level	35
5.3	Connecting the domestic hot water cylinder's heating flow and heating return	24	8.14	Restarting the installation assistants	35
5.4	Connecting the building circuit	25	8.15	Checking the configuration	35
5.5	Installing the drain hose on the expansion relief valve	25	8.16	Calling up statistics	35
6	Electrical installation	25	8.17	Floor drying	35
6.1	Preparing the electrical installation	25	8.18	Activating cooling mode	36
6.2	Requirements for the quality of the mains voltage	25	8.19	Starting up the optional system control	36
6.3	Electrical partition	26	8.20	Displaying the filling pressure in the building circuit	36
6.4	Installing components for the energy supply company lockout function	26	8.21	Checking function and leak-tightness	36
6.5	Opening the power supply PCB's electronics box	26	9	Adapting the unit to the heating installation	36
6.6	Routing the cables in the product	26	9.1	Configuring the heating installation	36
6.7	Establishing the power supply, 1~/230V	27	9.2	Total pressure loss in the product, heating circuit and domestic hot water	36
6.8	Establishing the power supply, 3~/400V	28	9.3	Setting the flow temperature in heating mode (with no control connected)	36
6.9	Installing the system control in the electronics box	29	9.4	Instructing the end user	36
6.10	Requirements for the eBUS line	29	10	Troubleshooting	37
			10.1	Contacting your service partner	37
			10.2	Displaying the Live Monitor (current product status)	37
			10.3	Checking fault codes	37

10.4	Querying the fault memory	37
10.5	Resetting the fault memory.....	37
10.6	Using the function menu.....	37
10.7	Using check programmes.....	37
10.8	Carrying out the actuator test	37
10.9	Resetting parameters to factory settings	37
10.10	Preparing the repair work	37
10.11	Safety cut-out.....	38
11	Inspection and maintenance	38
11.1	Inspection and maintenance information	38
11.2	Procuring spare parts	38
11.3	Checking maintenance messages.....	38
11.4	Observing inspection and maintenance intervals	39
11.5	Preparing for inspection and maintenance	39
11.6	Checking the pre-charge pressure of the expansion vessel	39
11.7	Checking the high-pressure switch-off	39
11.8	Checking and correcting the filling pressure of the heating installation	39
11.9	Completing inspection and maintenance.....	39
12	Draining	39
12.1	Draining the product's heating circuit.....	39
13	Decommissioning.....	40
13.1	Temporarily decommissioning the product.....	40
13.2	Permanently decommissioning the product.....	40
14	Recycling and disposal.....	40
14.1	Disposing of the product and accessories	40
15	Customer service.....	40
Appendix		41
A	Functional diagram.....	41
B	Wiring diagram.....	42
C	Basic connection diagram for the energy supply company lockout, shutdown via connection S21	43
D	Basic connection diagram for the energy supply company lockout, shutdown via partition	44
E	Installer level overview.....	45
F	Status codes	49
G	Maintenance messages	51
H	Comfort protection mode.....	51
I	5.4 kW back-up heater at 230 V and at 400 V	52
J	Inspection and maintenance work.....	52
K	Characteristic values for the internal temperature sensors, hydraulic circuit	52
L	Characteristic values for the VR10 internal temperature sensors, cylinder temperature	53
M	Characteristic values for the VRC DCF outdoor temperature sensor.....	54
N	Technical data.....	54
Index		56

1 Safety

1.1 Intended use

There is a risk of injury or death to the user or others, or of damage to the product and other property in the event of improper use or use for which it is not intended.

This product is a system component for controlling the heating circuits and domestic hot water generation in conjunction with a heat pump using a system control.

The product is intended exclusively for domestic use.

The intended use only allows for these product combinations:

Outdoor unit	Indoor unit
VWL ..5/6 A ..	VIH QW 190/6...
	VWZ MEH 97/6

- observance of accompanying operating, installation and maintenance instructions for the product and any other system components
- installing and setting up the product in accordance with the product and system approval
- compliance with all inspection and maintenance conditions listed in the instructions.

Intended use also covers installation in accordance with the IP code.

Any other use that is not specified in these instructions, or use beyond that specified in this document, shall be considered improper use. Any direct commercial or industrial use is also deemed to be improper.

Caution.

Improper use of any kind is prohibited.

1.2 General safety information

1.2.1 Risk caused by inadequate qualifications

The following work must only be carried out by competent persons who are sufficiently qualified to do so:

- Set-up
- Dismantling
- Installation
- Start-up

- Inspection and maintenance
- Repair
- Decommissioning
- ▶ Proceed in accordance with current technology.

1.2.2 Risk of death from electric shock

There is a risk of death from electric shock if you touch live components.

Before commencing work on the product:

- ▶ Disconnect the product from the power supply by switching off all power supplies at all poles (electrical partition in over-voltage category III for full partition, e.g. fuse or circuit breaker).
- ▶ Secure against being switched back on again.
- ▶ Wait for at least 3 minutes until the capacitors have discharged.
- ▶ Check that there is no voltage.

1.2.3 Risk of death due to lack of safety devices

The basic diagrams included in this document do not show all safety devices required for correct installation.

- ▶ Install the necessary safety devices in the installation.
- ▶ Observe the applicable national and international laws, standards and directives.

1.2.4 Risk of burns or scalding caused by hot components

- ▶ Only carry out work on these components once they have cooled down.

1.2.5 Risk of being scalded by hot potable water

There is a risk of scalding at the domestic hot water draw-off points if the domestic hot water temperatures are greater than 50 °C. Young children and elderly persons are particularly at risk, even at lower temperatures.

- ▶ Select a temperature at which nobody can be harmed.
- ▶ Inform the end user about the risk of scalding when the **Anti-legionella** function is switched on.



1.2.6 Risk of injury due to the heavy weight of the product

- ▶ Make sure that the product is transported by at least two people.

1.2.7 Risk of material damage due to an unsuitable installation surface

The installation surface must be even and have sufficient load-bearing capacity to support the operating weight of the product. An uneven installation surface may cause leaks in the product.

There is a risk of death if the connections are subject to leaks.

- ▶ Make sure that the product is positioned flush against the installation surface.
- ▶ Ensure that the installation surface has sufficient load-bearing capacity to bear the operating weight of the product.

1.2.8 Risk of material damage due to malfunctioning

Not rectifying faults, changing the safety devices and failing to carry out maintenance can cause malfunctioning and pose safety risks during operation.

- ▶ Ensure that the heating installation is in a technically perfect condition.
- ▶ Ensure that no safety or monitoring devices have been removed, bridged or disabled.
- ▶ Immediately eliminate any faults and damage that may affect safety.

1.2.9 Risk of material damage due to additional elements in the heating water

Unsuitable antifreeze and corrosion inhibitors may damage seals and other components of the heating circuit, and may therefore also cause water leaks.

- ▶ Only add approved antifreeze and corrosion inhibitors to the heating water.

1.2.10 Risk of material damage caused by frost

- ▶ Do not install the product in rooms prone to frost.

1.2.11 Risk of material damage caused by using an unsuitable tool

- ▶ Use the correct tool.

1.3 Regulations (directives, laws, standards)

- ▶ Observe the national regulations, standards, directives, ordinances and laws.



2 Notes on the documentation

- ▶ Always observe all the operating and installation instructions included with the system components.
- ▶ Pass these instructions and all other applicable documents on to the end user.

These instructions apply only to:

Product
VWZ MEH 97/6

Product
VIH QW 190/6 E GB

2.1 Further information




- ▶ Scan the displayed code using your smartphone in order to view further information about the installation.
 - ◀ You are guided to installation videos.

3 Product description

3.1 Heat pump system

Design of a typical heat pump system with monoblock technology:

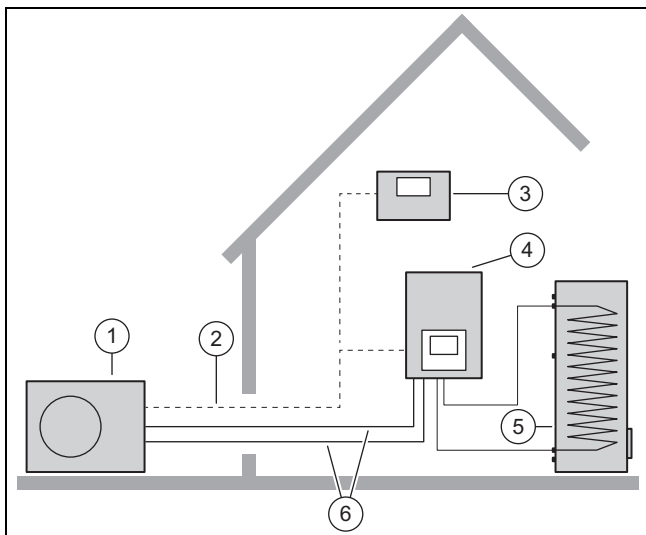

- | | |
|-----------------------------|--|
| 1 Heat pump, outdoor unit | 4 Heat pump, indoor unit |
| 2 eBUS line | 5 Monovalent domestic hot water cylinder |
| 3 System control (optional) | 6 Heating circuit |

3.2 Safety devices

3.2.1 Frost protection function

The frost protection function for the system is controlled using the product itself or using the optional system control. If the system control fails, the product guarantees limited frost protection for the heating circuit.

At negative outdoor temperatures, there is an increased risk of the heating water freezing if a heat pump fault occurs, e.g. due to a power cut or a defective compressor.

3.2.2 Low-water pressure protection

This function continuously monitors the heating water pressure in order to prevent a possible loss of heating water. If the water pressure falls below the minimum pressure, an analogue pressure sensor switches the product off and, if available, switches other modules to standby mode. If the water pressure reaches the operating pressure, the pressure sensor switches the product back on.

If the heating water pressure falls below ≤ 0.1 MPa (1 bar), a maintenance message appears below the display of the minimum operating pressure.

- Min. heating circuit pressure: ≥ 0.05 MPa (≥ 0.50 bar)
- Min. heating circuit operating pressure: ≥ 0.07 MPa (≥ 0.70 bar)


3.2.3 Safety cut-out (SCO) in the heating circuit

If the temperature in the heating circuit of the internal electric back-up heater exceeds the maximum temperature, the safety cut-out shuts down the electric back-up heater as a securing measure. After it is triggered, the safety cut-out must be replaced.

- Max. heating circuit temperature: 89°C


3.3 Product overview

3.3.1 Product design

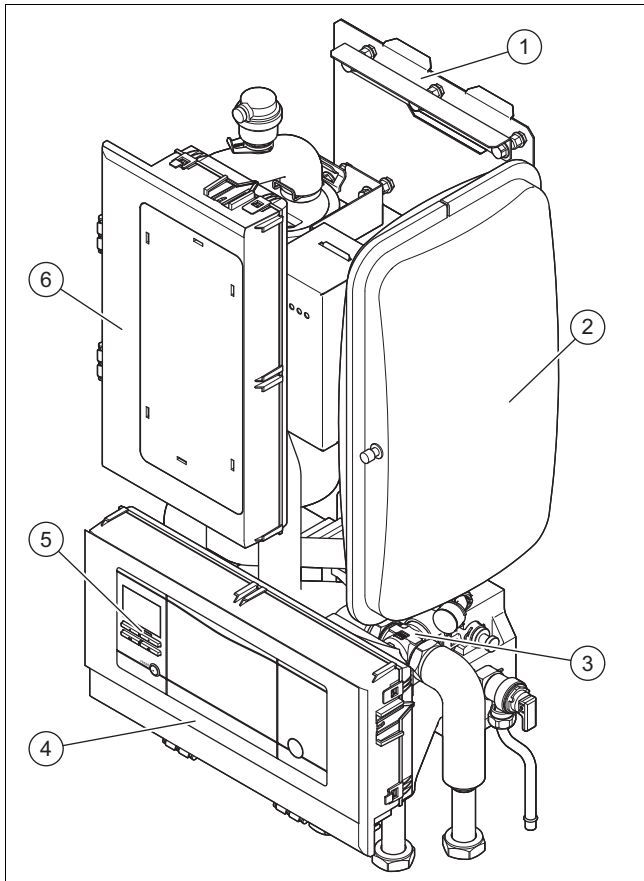


- | | | | |
|---|-----------------------|---|---------------------------------------|
| 1 | Unit mounting bracket | 4 | Electronics box with control PCB |
| 2 | Expansion vessel | 5 | Control for the indoor unit |
| 3 | Hydraulic block | 6 | Electronics box with power supply PCB |

3.3.2 Design of the hydraulic block

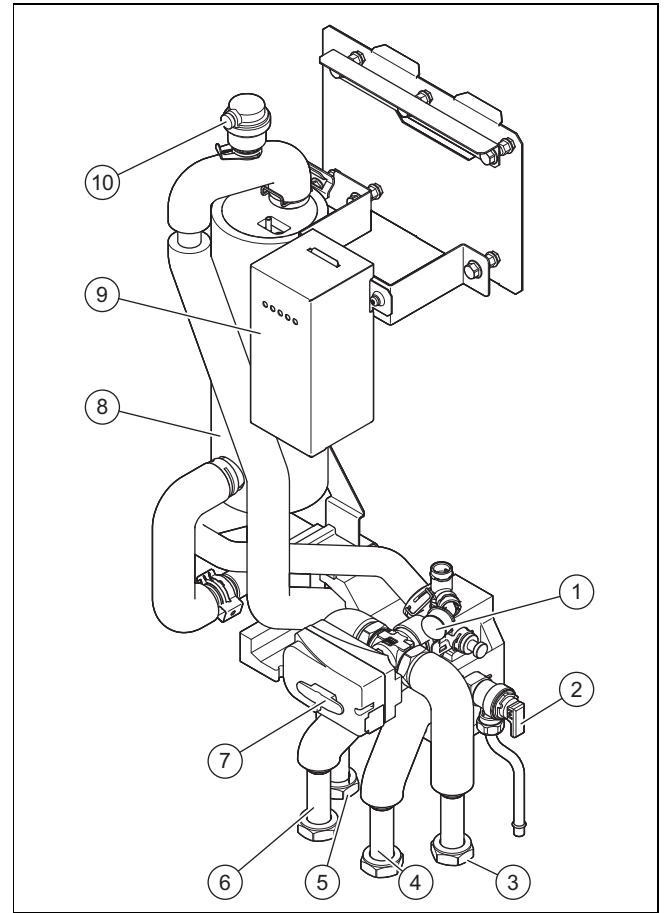

- | | | | |
|---|------------------------------------|----|---|
| 1 | Manometer | 6 | Domestic hot water cylinder flow |
| 2 | Expansion relief valve | 7 | Prioritising diverter valve (heating circuit/cylinder charging) |
| 3 | Building circuit return | 8 | Electric back-up heater |
| 4 | Building circuit flow | 9 | Safety cut-out |
| 5 | Domestic hot water cylinder return | 10 | Automatic air vent |

3.3.3 Underside of the product

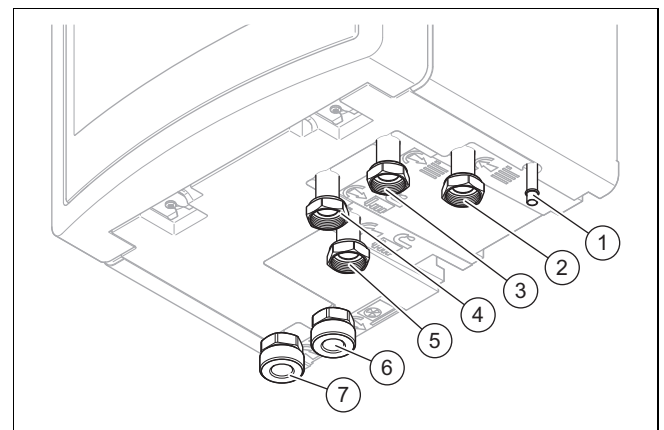

- | | | | |
|---|----------------------------------|---|------------------------------------|
| 1 | Drain for expansion relief valve | 5 | Domestic hot water cylinder return |
| 2 | Building circuit return | 6 | Heating return, to the heat pump |
| 3 | Building circuit flow | 7 | Heating flow, from the heat pump |
| 4 | Domestic hot water cylinder flow | | |

3.4 Serial number

The serial number can be found on the data plate on the rear of the electronics box.

The serial number may also be shown on the product's display (→ Operating instructions).

3.5 Information on the data plate

The data plate keeps record of the country in which the product is to be installed.

	Information	Meaning
	Serial no.	Unique unit identification number
Nomenclature	VWZ	Vaillant heat pump accessory
	MEH	Electro-hydraulic module
	97	9 = 9 kW back-up heater 7 = integrated 3-port motorised valve for external domestic hot water cylinder
	/6	Unit generation
	230 V	Electrical connection: 230 V: 1~N/PE 230 V 400 V: 3~N/PE 400 V
	IP	Protection class
Symbols		Control
		Heating circuit
		Back-up heater
	P max	Rated power, maximum
	P	Rated power
	I max	Rated current, maximum
	I	In-rush current
Heating circuit, domestic hot water circuit	MPa (bar)	Permissible operating pressure
	L	Fill quantity
	CE marking	See section "CE marking"

3.6 Connection symbols

Symbol	Connection
	Building circuit, flow
	Building circuit, return
	Heating flow, outdoor unit

Symbol	Connection
	Heating return, outdoor unit
	Heating flow, domestic hot water cylinder
	Heating return, domestic hot water cylinder

3.7 CE marking



The CE marking shows that the products comply with the basic requirements of the applicable directives as stated on the declaration of conformity.

The declaration of conformity can be viewed at the manufacturer's site.

3.8 Cooling mode

Depending on the country, the outdoor unit has the heating mode or heating and cooling mode function. The indoor unit is compatible with this.

Outdoor units that are delivered at the factory with no cooling mode are labelled with "S2" in the nomenclature. For these units, an optional accessory can be used to subsequently activate the cooling mode.

It is activated via a coding resistor and via a setting on the indoor unit's control panel and on the optional system control (→ Section 8.18).

3.9 Display of the energy consumption, energy yields and efficiencies

The product, the system control and the app show approximate values for energy consumption, energy yields and efficiencies, which are extrapolated based on calculation algorithms.

The values that are displayed in the app may differ from the other display options due to staggered transfer intervals.

The determined values depend on:

- Installation and system of the heating installation
- User behaviour
- Seasonal weather effects
- Various tolerances of unit-internal components

The recording of the values only includes the product in the factory-delivered condition. Supplementary accessories, even if they are installed on the product, as well as any other components in the heating system and other external consumers, are not part of the data recording.

Deviations between the determined values and the actual values may be significant. The determined values are therefore not suitable for creating or comparing energy billing, for example.

When replacing the PCB, the values for energy consumption, energy yields and efficiencies are reset in the heat pump's control panel.

4 Set-up

4.1 Unpacking the product

1. Remove the product from the packaging.
2. Remove the documentation.
3. Remove the protective film from all parts of the product.

4.2 Checking the scope of delivery

- Check that the scope of delivery is complete and intact.

Number	Designation
1	Hydraulic station
1	Unit mounting bracket
1	Enclosed documentation
1	Bag with installation material
1	Selection lever for prioritising diverter valve
1	Filling device
1	5-pole 400 V connection cable, 5 x 2.5 mm ²
1	Adhesive strips for noise reduction

4.3 Selecting the installation site

- The installation site must be below 2000 metres above sea level.
- Select a dry room that is frost-proof throughout and in which the maximum installation height is not exceeded and the environmental temperature is neither above nor below the permitted range.
 - Permissible environmental temperature: 7 to 35 °C
 - Permissible relative air humidity: 40 to 75 %
- Ensure that the required minimum clearances can be maintained.
- Observe the permissible height difference between the outdoor unit and indoor unit (→ Section 4.4).
- When selecting the installation site, you must take into consideration that, when the product is in operation, it transfers vibrations to the floor and the nearby walls.
- Ensure that the wall is even and offers sufficient load-bearing capacity to bear the weight of the product.
- Ensure that the pipes are routed appropriately.
- Do not install the product above another unit that may damage it (e.g. above a cooker that produces water vapour and grease) or in a room with a high level of exposure to dust or in a corrosive environment.
- Do not install the product below a unit from which liquids may flow.

4.4 Permissible height difference between the outdoor unit and the indoor unit

In relation to the outdoor unit's installation site, the indoor unit's installation site may be located higher or lower.

The permissible height difference depends on the unit type of the outdoor unit:

4.4.1 Outdoor unit with unit type S or M

Unit type	Product example
S, M	VWL 35/6 A 230V S2 to VWL 75/6 A 230V S2


The permissible height difference between the outdoor unit and the indoor unit is limited to 15 m.


4.4.2 Outdoor unit with unit type L

Unit type	Product example
L	VWL 105/6 A 230V S2 to VWL 125/6 A S2


Observe the permissible height difference (→ Installation instructions for the outdoor unit with unit type L)

4.5 Dimensions

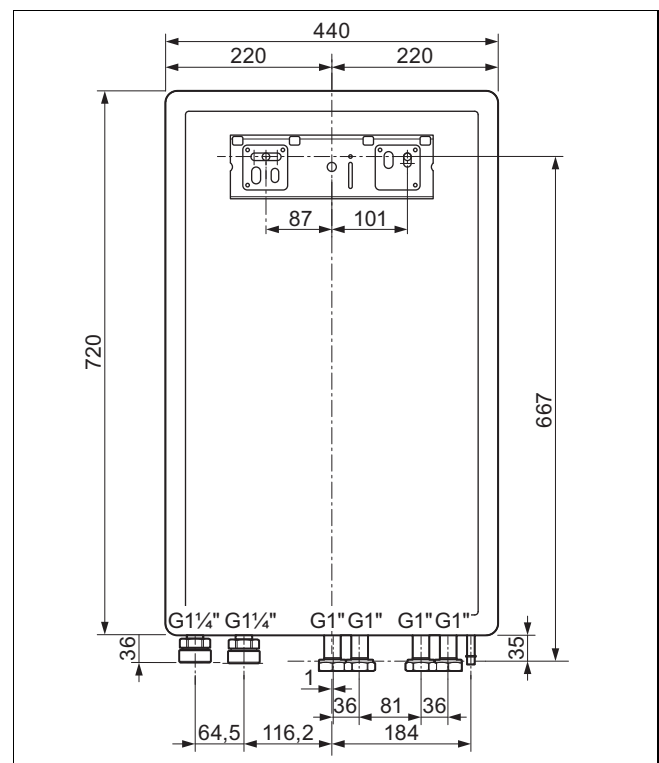

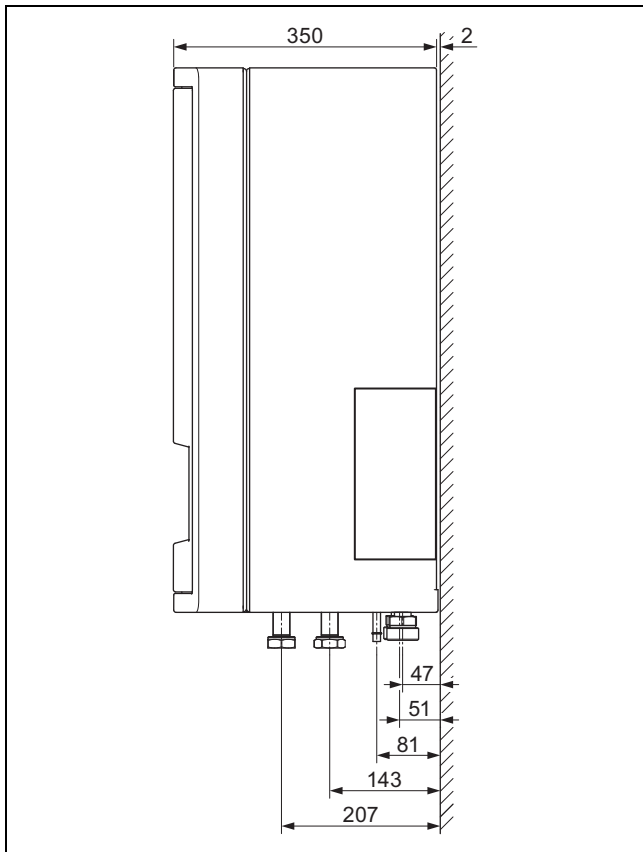

4.6 Minimum clearances and installation clearances

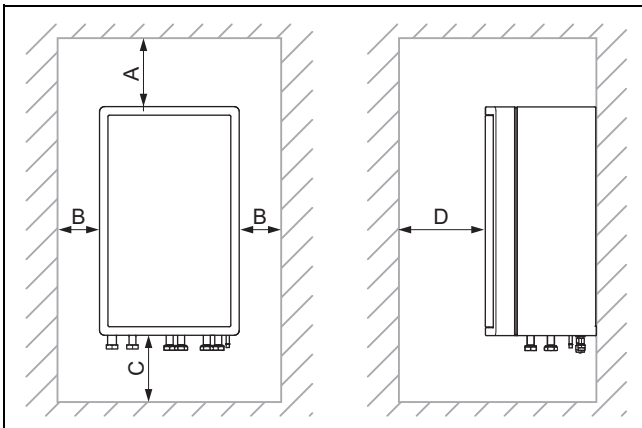


A	Min. 200 mm	C	1000 mm
B	Min. 200 mm	D	> 600 mm


- Provide sufficient clearance on both sides of the product in order to facilitate access for maintenance and repair work.
- When using the accessories, observe the minimum clearances/installation clearances.
- Ensure that no highly flammable parts come into contact with the components as these may reach temperatures of over 80°C.
- Ensure that there is a minimum clearance between the highly flammable parts and the hot components.

- Minimum clearance: 200 mm

4.7 Wall-mounting the product

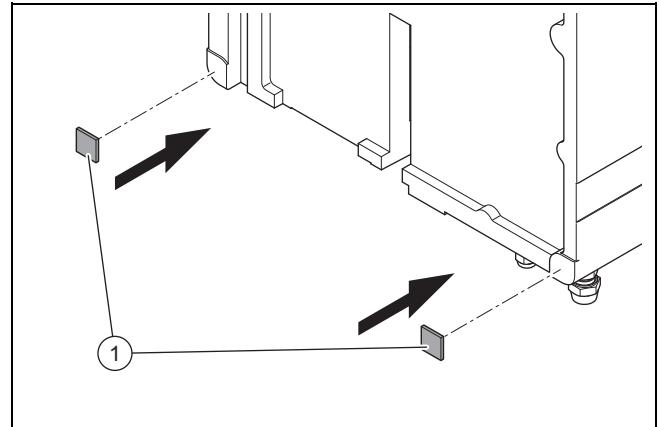


1. Cut the enclosed adhesive strips (1) for noise reduction into two equally sized pieces (3 cm x 3 cm).
2. Affix the adhesive strips to the product as shown in the figure.

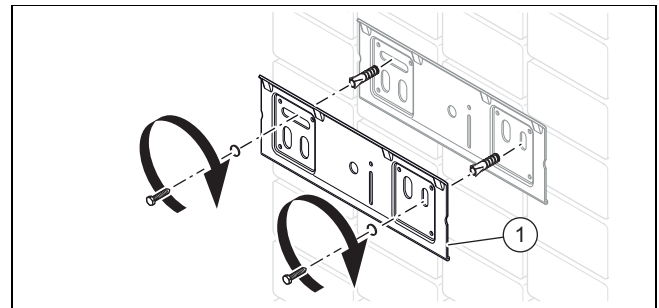

3. Check the load-bearing capacity of the wall.
4. Note the total weight of the product.
5. Only use fixing material that is permitted for the wall (on-site, not included in the scope of delivery).
6. If required, ensure that mounting apparatus on-site has sufficient load-bearing capacity.
7. Hang the product on the unit mounting bracket from above using the hanging bracket (1).

4.8 Removing the front casing

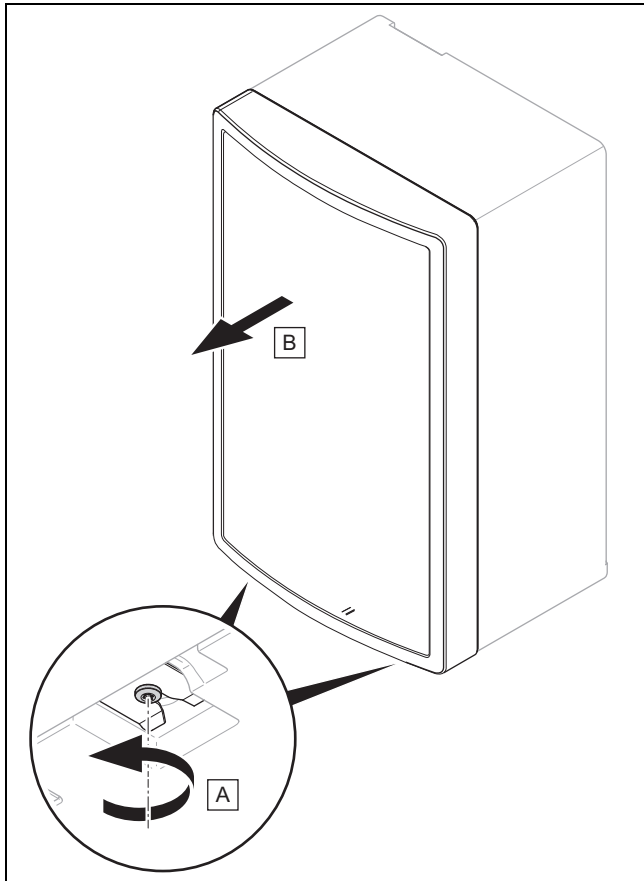

- ▶ Reinstall the components in the reverse order.
 - Torx T20 screwdriver



Note

All connecting screws in the housing parts are Torx T20.


5 Hydraulics installation

5.1 Carrying out the installation preparations

- ▶ Install the following components, preferably from the manufacturer's accessories:
 - An expansion relief valve, a stopcock and a manometer on the heating return
 - A domestic hot water safety assembly and a stopcock on the cold water supply
 - A stopcock on the heating flow
- ▶ Check whether the volume of the installed expansion vessel is sufficient for the heating system. If required, install an additional expansion vessel, connected as close to the product as possible, in the heating return. Adjust the pre-charge pressure of the heating installation.
- ▶ Install the connection pipes such that they are free from mechanical stress.
- ▶ If you are using metallic pipes to connect the pipe to the outdoor unit, earth the pipes.
- ▶ Heat-insulate the pipes.
- ▶ Only solder connectors if the connectors are not yet screwed to the service valves.
- ▶ Carefully flush the heating installation before connecting the product.

- ▶ Check whether the expansion relief valve's drain pipe-work opposite the outdoor air remains open, is installed in a frost-free environment, always runs downwards and visibly ends in an open drain.
- ▶ For heating installations with solenoid valves or thermostatically controlled valves, install a bypass with bypass valve in order to guarantee a volume flow of at least 40%.


5.2 Connecting the heat pump to the indoor unit

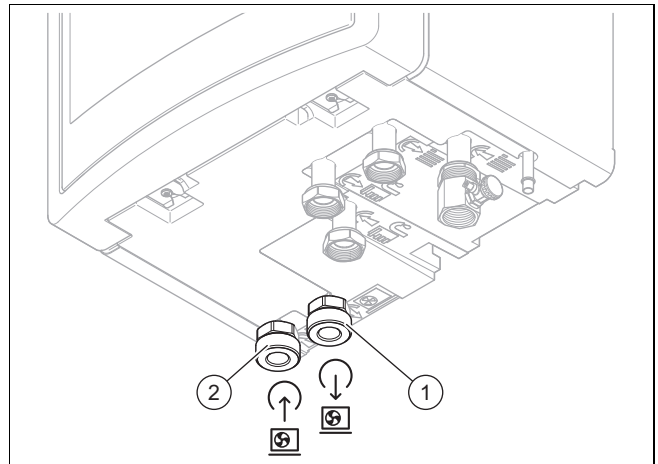

- | | | | |
|---|--|---|--|
| 1 | G 1 1/4" connection, heating return to the heat pump | 2 | G 1 1/4" connection, heating flow from the heat pump |
|---|--|---|--|


1. Blow or flush the supply pipes thoroughly prior to installation.
2. Connect the heat pump to the hydraulic station.

5.3 Connecting the domestic hot water cylinder's heating flow and heating return

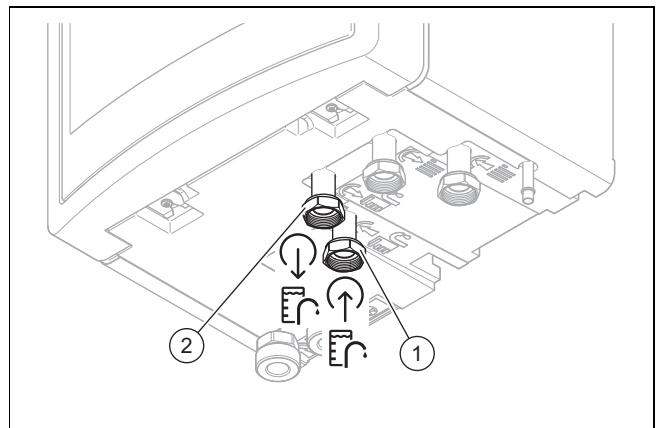


- ▶ Connect the domestic hot water cylinder's heating return (1) and heating flow (2) in accordance with the relevant standards.

5.4 Connecting the building circuit

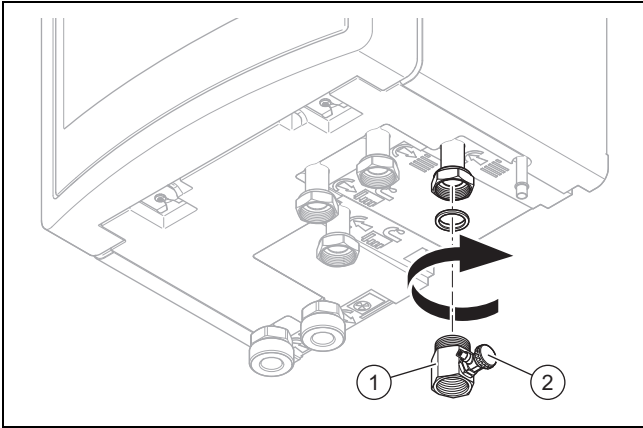


1. Connect the filling device with the enclosed seal to the product's heating return.

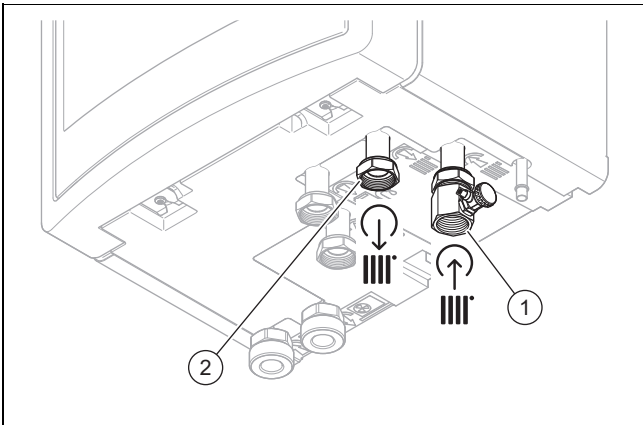

2. Connect the building circuit's return (1) and flow (2) in accordance with the relevant standards.

5.5 Installing the drain hose on the expansion relief valve

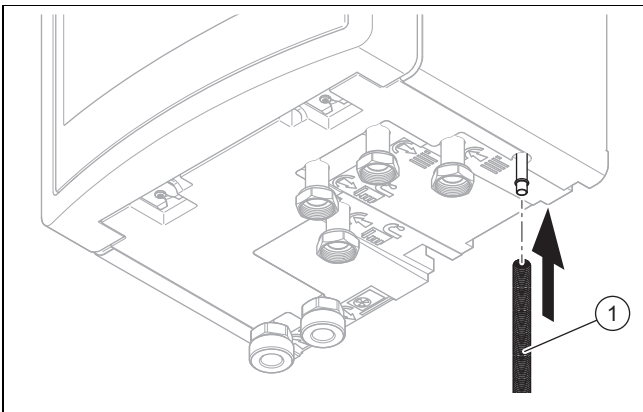

1. Install a drain hose (1) on the expansion relief valve.
2. Install the expansion relief valve hose in a frost-free environment and ensure that its routing ends in an open drain where it is then visible.
3. Terminate the drain hose in such a way that escaping water or steam cannot cause injury to persons or damage to electrical components.
4. Open the expansion relief valve regularly in order to remove scale deposition, and ensure that the device is not blocked.

6 Electrical installation

6.1 Preparing the electrical installation



Danger!

Risk of death from electric shock as a result of an improper electrical connection!

An improper electrical connection may negatively affect the operational safety of the product and result in material damage or personal injury.

- Only carry out the electrical installation if you are a trained competent person and are qualified for this work.

1. Observe the technical connection conditions for connecting to the energy supply company's low-voltage network.
2. Use the data plate to determine whether the product requires a 1~/230 V or a 3~/400 V electrical connection.
3. If the local power supply network operator requires that the heat pump is controlled using an ESCO blocking signal, install a corresponding contact switch as prescribed by the power supply network operator.
4. Determine whether the power supply for the product should be set up with a single-tariff meter or a dual-tariff meter.
5. Connect the product via a fixed connection and a partition with a contact gap of at least 3 mm.
6. For the electrical fuse protection, use slow-blow fuses with C characteristics. Lay out fuses in accordance with the selected connection diagrams. Use three-pole switching fuses for a three-phase power supply.
7. Leave the cable cross-section for the connection cable to the distribution box unchanged.
8. If the power supply cable for this product is damaged, it must be replaced by the manufacturer or their customer service or a similarly qualified person in order to prevent any hazards.
9. Ensure that the nominal voltage of the power grid corresponds to that of the product's main power supply cabling.
10. Make sure that access to the power supply is always available and is not covered or blocked.
11. Determine whether the energy supply company lockout function has been provided for the product, and how the power supply for the product should be designed, depending on the type of shutdown.

6.2 Requirements for the quality of the mains voltage

For the mains voltage of the single-phase 230 V network, a tolerance of +10% to -15% must be provided.

For the mains voltage of the three-phase 400 V network, a tolerance of +10% to -15% must be provided. For the voltage difference between the individual phases, a tolerance of +-2% must be provided.

6.3 Electrical partition

The electrical partitions are referred to as "disconnectors" in these instructions. The fuse or the circuit breaker that is installed in the building's meter/fuse box is usually used as the disconnector.

6.4 Installing components for the energy supply company lockout function

Condition: Energy supply company lockout function provided

The heat generation of the heat pump can be switched off intermittently. It is switched off by the energy supply company and usually with a ripple control receiver.

Option 1: Actuating connection S21

- ▶ Connect a 2-pole control cable to the relay contact (potential-free) for the ripple control receiver and to the connection S21, see appendix.



Note

In the event of control via connection S21, the energy supply does not have to be disconnected on-site.

- ▶ In the system control, set whether the back-up heater, the compressor or both should be blocked.
- ▶ Set the parametrisation for connection S21 in the system control.

Option 2: Disconnect the power supply with contactor

- ▶ Upstream of the indoor unit, install a contactor into the power supply for the low tariff.
- ▶ Install a 2-pole control cable. Connect the control output for the ripple control receiver to the control input for the contactor.
- ▶ Undo the lines to plug X311, which were factory-installed, and remove these along with plug X310.
- ▶ Connect an unblocked power supply to X311.
- ▶ Connect the power supply that is switched by the contactor to X300, see appendix.




Note

When the energy supply (for the compressor or back-up heater) is switched off via the tariff contactor, S21 is not connected.


6.5 Opening the power supply PCB's electronics box

1. Remove the front casing. (→ Section 4.8)

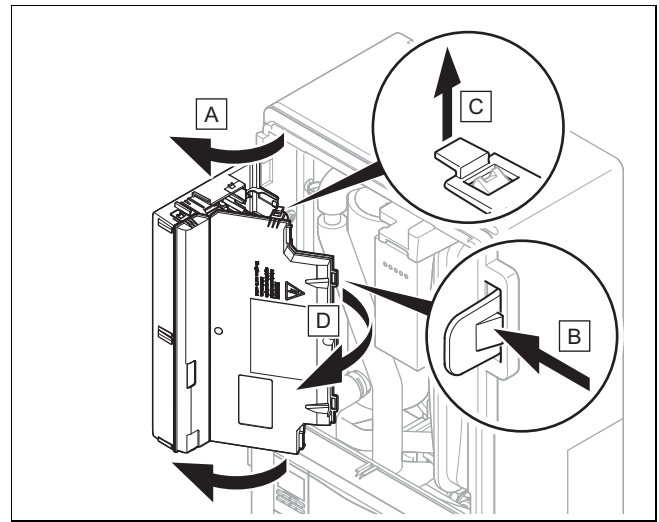


2. Hinge the electronics box forwards.
3. Detach the four clips, on the left and the right, from the brackets.

6.6 Routing the cables in the product

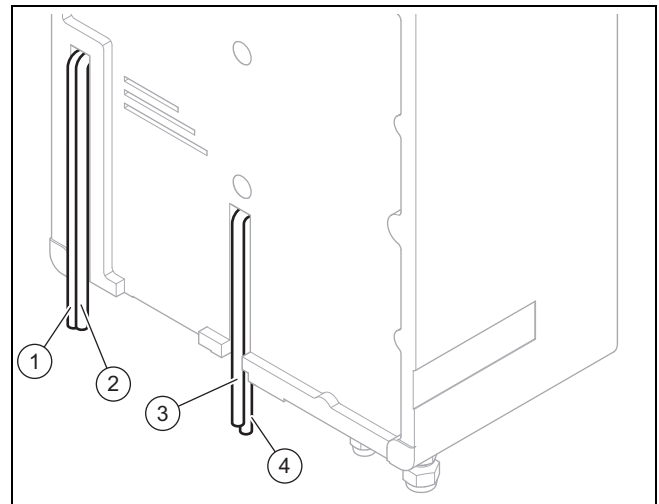

1. Remove the front casing. (→ Section 4.8)
2. Open the power supply PCB's electronics box. (→ Section 6.5)
3. Guide the power supply cable (3) and additional power supply cables (230 V) (4) through the central opening and into the product.
4. Guide the eBUS cable (1) and other low-voltage connection cables (24 V) (2) through the left-hand unit opening and into the product.

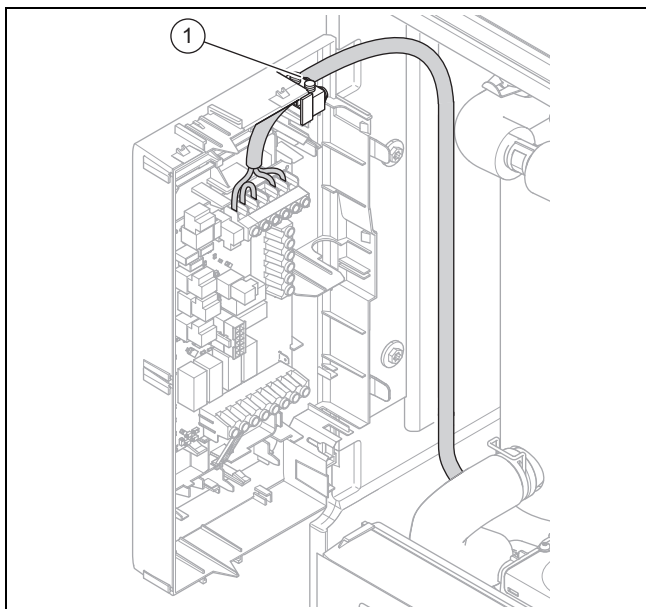

5. Guide the power supply cables through the strain relief (1) to the terminals on the power supply PCB.
6. Connect the power supply cable to the corresponding terminals.
7. Secure the power supply cable in the strain reliefs.

6.7 Establishing the power supply, 1~/230V

- Determine the type of connection:

Case	Connection type
Energy supply company lockout not provided	Single power supply
Energy supply company lockout provided, shutdown via connection S21	
Energy supply company lockout provided, shutdown via partition	Dual power supply


6.7.1 1~/230V single power supply



Caution.
Risk of material damage due to high connected voltage.

With excessive mains voltages, electronic components may be damaged.

- Ensure that the mains voltage is in the permissible range.

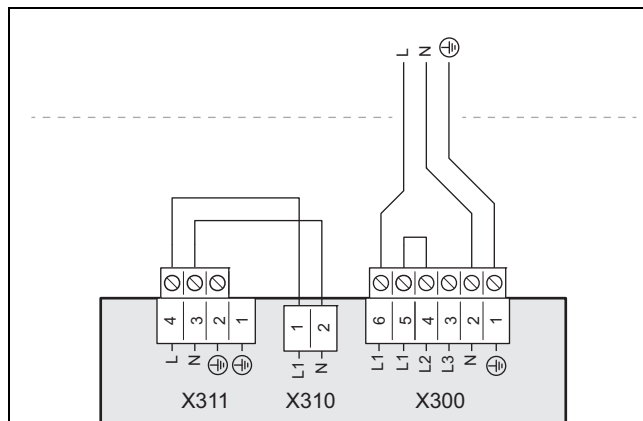

1. Note the specifications on the sticker on the electronics box.
2. Install a disconnector for the product.
3. Use the preinstalled 3-pole power supply cable (3 x 4 mm²).
4. Connect the power supply cable to L1, N, PE.

6.7.2 1~/230V dual power supply




Caution.

Risk of material damage due to high connected voltage.

With excessive mains voltages, electronic components may be damaged.

- Ensure that the mains voltage is in the permissible range.

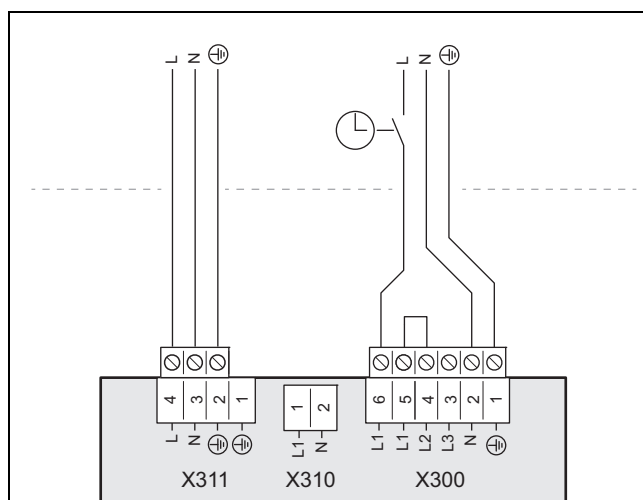

1. Note the specifications on the sticker on the electronics box.
2. Install two disconnectors for the product.
3. Use the preinstalled 3-pole power supply cable and an additional 3-pole power supply cable (3 x 4 mm²) with a temperature resistance of 90 °C.
 - Note that commercially available power supply cables do not usually have sufficient temperature resistance.
4. Connect the preinstalled power supply cable to the X300 connection with the heat pump electricity meter.
5. Remove the 2-pole bridge between connections X310 and X311.
6. Connect the additional power supply cable (from the household electricity meter) to connection X311.

7. Use the strain relief clamps to secure the cables in place.

6.8 Establishing the power supply, 3~/400V

- Determine the type of connection:

Case	Connection type
Energy supply company lockout not provided	Single power supply
Energy supply company lockout provided, shutdown via connection S21	
Energy supply company lockout provided, shutdown via partition	Dual power supply

6.8.1 3~/400V single power supply




Caution.

Risk of material damage due to high connected voltage.

With excessive mains voltages, electronic components may be damaged.

- Ensure that the mains voltage is in the permissible range.

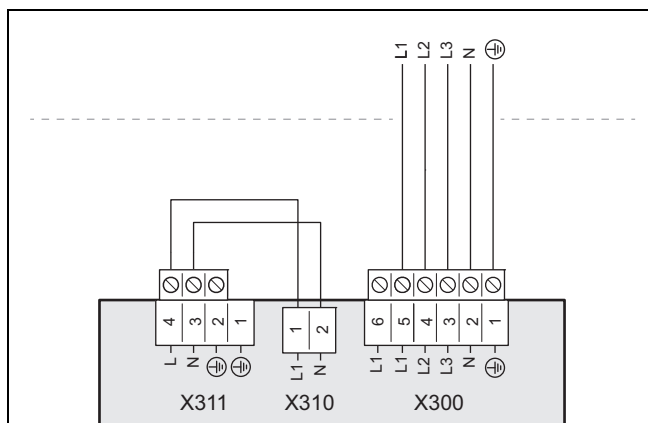

1. Note the specifications on the sticker on the electronics box.
2. Install a disconnector for the product.
3. Use the enclosed 5-pole power supply cable (5 x 2.5 mm²).
4. Remove the preinstalled 3-pole power supply cable to the X300 connection.
5. Remove the 2-pole bridge from between contacts L1 and L2 on connection X300.
6. Connect the 5-pole power supply cable to the X300 connection.

6.8.2 3~/400V dual power supply




Caution.

Risk of material damage due to high connected voltage.

With excessive mains voltages, electronic components may be damaged.


- Ensure that the mains voltage is in the permissible range.

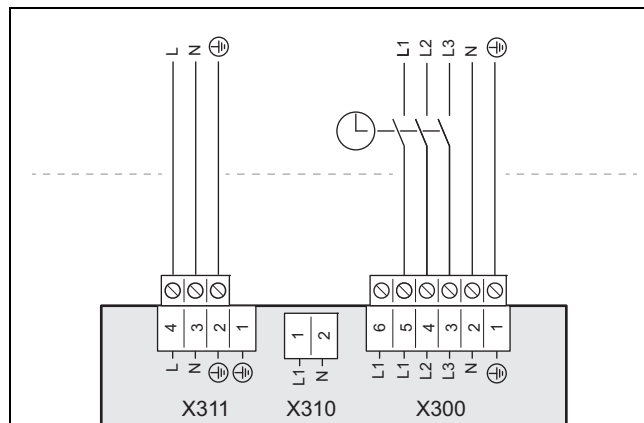

1. Note the specifications on the sticker on the electronics box.
2. Install two disconnectors for the product.
3. Use the enclosed 5-pole power supply cable (5 x 2.5 mm²) and the preinstalled 3-pole power supply cable (3 x 4 mm²).
4. Remove the preinstalled 3-pole power supply cable from the X300 connection.
5. Remove the 2-pole bridge from between contacts L1 and L2 on connection X300.
6. Remove the 2-pole bridge between connections X310 and X311.
7. Connect the 5-pole power supply cable (from the heat pump electricity meter) to connection X300.
8. Connect the 3-pole power supply cable (from the household electricity meter) to connection X311.
9. Use the strain relief clamps to secure the cables in place.

6.9 Installing the system control in the electronics box

Condition: Installing a multiMATIC VRC 700

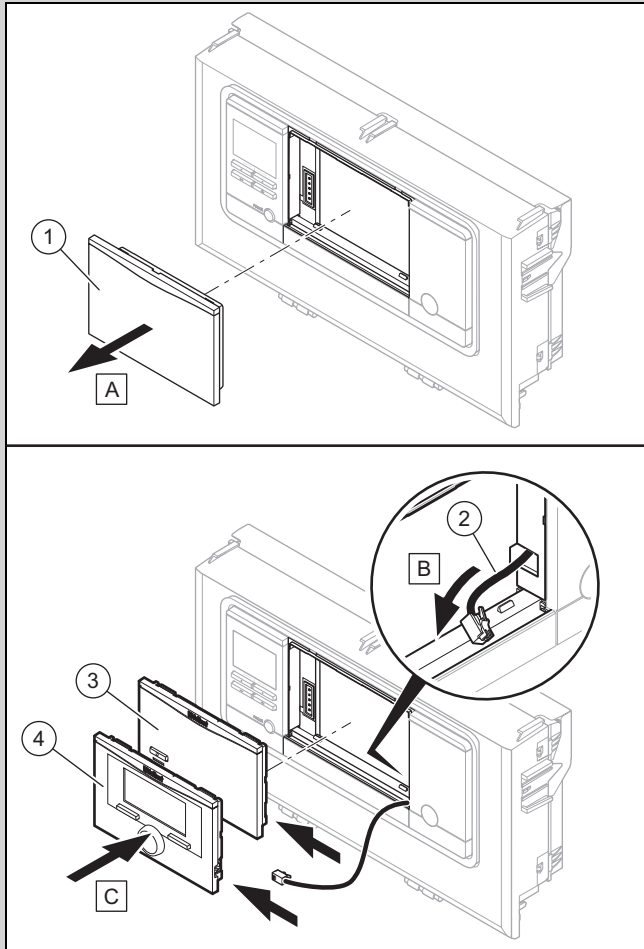

- ▶ Remove the cover (1) on the electronics box.
- ▶ Connect the DIF cable (2), which is laid out ready, either to the system control or to the mobile base station.
- ▶ If you are using a radio receiver, use the mobile base station (3).
- ▶ Consult the instructions for the system control for information on coupling the mobile base station and the system control.
- ▶ If you are using the wired system control, use the system control (4), → Installation instructions for the system control and system instructions.
- ▶ Consult the wiring diagram in the appendix for information on the integration into the eBUS network.

6.10 Requirements for the eBUS line

Observe the following rules when routing the eBUS lines:


- ▶ Use twin-core cables.
- ▶ Never use shielded or twisted cables.
- ▶ Use only appropriate cables, e.g. NYM or H05VV (-F/-U).
- ▶ Observe the permissible total length of 125 m. For a total length of up to 50 m, a conductor cross-section of $\geq 0.75 \text{ mm}^2$ applies; from 50 m upwards, a conductor cross-section of 1.5 mm^2 applies.

In order to prevent faults in the eBUS signals (e.g. due to interferences):

- ▶ Maintain a minimum clearance of 120 mm to power supply cables or other electromagnetic sources of interference.

- ▶ For parallel routing to mains connection lines, guide the cables in accordance with the applicable regulations, e.g. on cable trays.
- ▶ **Exceptions:** For wall breaks and in the electronics box, it is acceptable to not reach the minimum clearance.


6.11 Opening the control PCB's electronics box

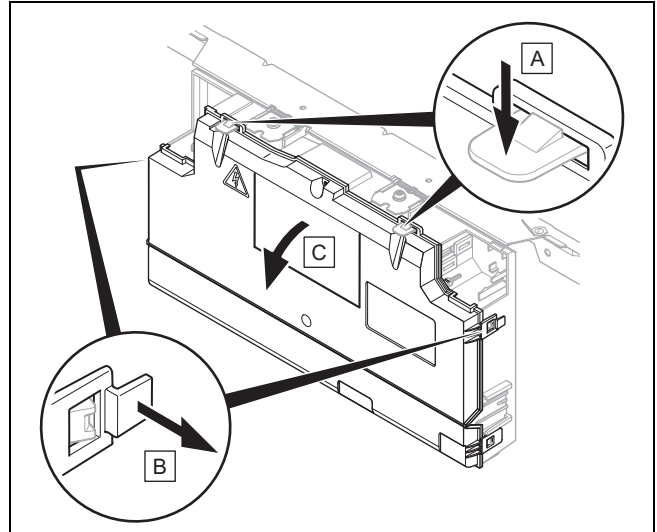


1. Hinge the electronics box forwards.
2. Undo the four clips on the left and the right and the top from the brackets.

6.12 Routing the cables in the electronics box

1. At lengths of over 10 m, route connection cables with mains voltage separately from sensor lines. Minimum clearance for the extra low-voltage wire and power supply cable at a line length of > 10 m: 25 cm.
2. Observe the requirements for eBUS lines. (→ Section 6.10)

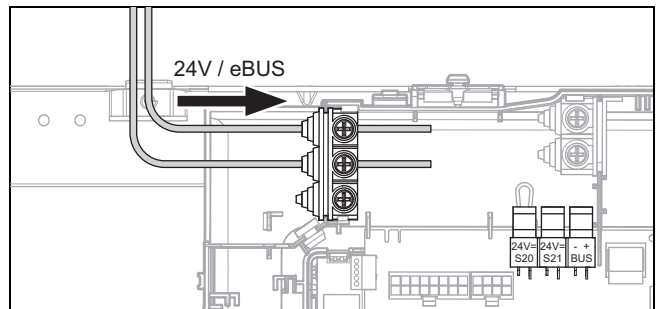

3. Route 24 V cables and eBUS cables through the left-hand strain reliefs on the electronics box.

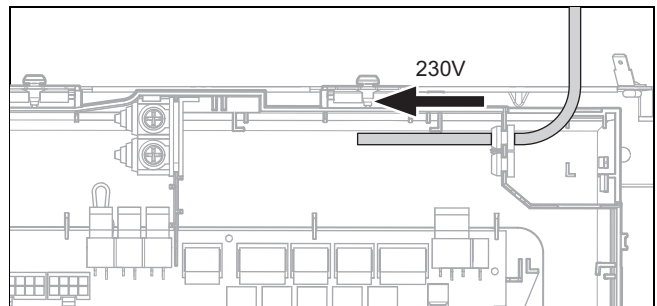

4. Route 230 V cables through the right-hand strain reliefs on the electronics box.

6.13 Carrying out the wiring



Note


There is a safety extra-low voltage (SELV) at connections S20 and S21.



Note

If the energy supply company lockout function is used, connect a potential-free normally open contact with a breaking capacity of 24 V/0.1 A to connection S21. You must configure how the connection works in the system control. (For example, if the contact is closed, the electric back-up heater is blocked.)

1. Ensure that the mains voltage is correctly disconnected from the safety extra-low voltage.
2. Only connect power supply cables to the terminals that are marked for the purpose.
3. Shorten the connection cables according to requirements.

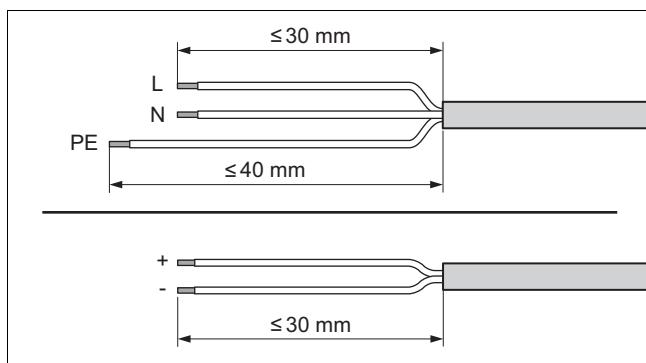


4. Strip the electrical wire as shown in the figure. In doing so, ensure that the insulation on the individual conductors is not damaged.
5. Ensure the inner conductor insulation is not damaged when stripping the outer sheathing.
6. Only strip inner conductors just enough to establish good, sound connections.
7. Fit conductor end sleeves on the stripped ends of the conductors.
8. Screw the respective plug to the connection cable.
9. Check whether all conductors are inserted mechanically securely in the plug terminals. Remedy this if necessary.
10. Plug the plug into the associated PCB slot.

6.14 Connecting the circulation pump

1. Route the 230 V connection cable for the circulation pump from the right and into the control PCB's electronics box.
2. Connect the 230 V connection cable to the plug from slot X11 on the control PCB and plug it into the slot.

Condition: Activation of the circulation via an external button

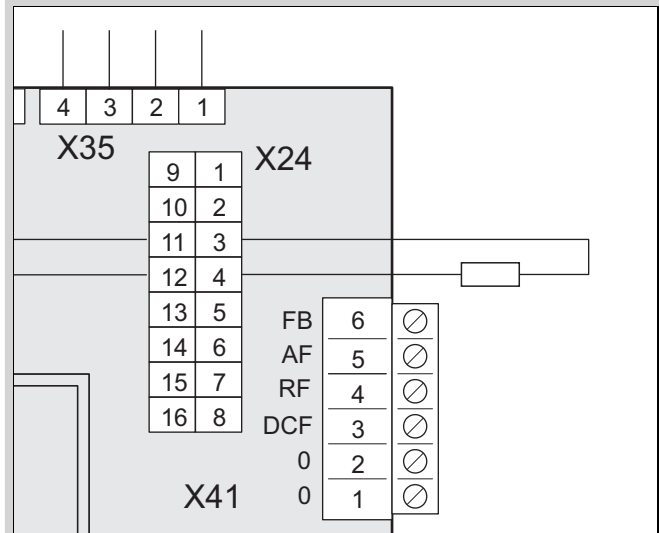

- ▶ Connect the connection cable for the external button using terminals 1 (0) and 6 (FB) on the X41 edge connector, which is supplied with the control.
- ▶ Plug the edge connector into slot X41 on the control PCB.

3. Set the circulation pump in the system control.

6.15 Connecting a limit thermostat for the underfloor heating

Condition: Intermediate heat exchanger installed

- ▶ Remove the bypass line at plug S20 on the indoor unit's control PCB.
- ▶ Connect the limit thermostat to plug S20 for the indoor unit.


Condition: No intermediate heat exchanger installed

- ▶ Connect the limit thermostat to plug S20 for the outdoor unit, → aroTHERM plus operating and installation instructions.

6.16 Actuating a circulation pump with an eBUS control

1. Ensure that the circulation pump is correctly parametrised in the system control.
2. Select a hot water programme (preparation).
3. Parametrise a circulation programme in the system control.
 - ◁ The pump runs during the time period specified in the programme.

6.17 Connecting the outdoor temperature sensor

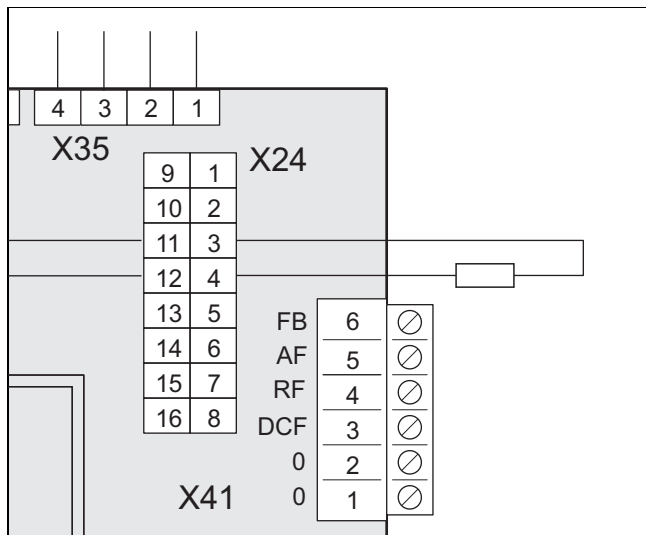

- Connect the connection cable for an outdoor temperature sensor to terminals 2 (0) and 5 (AF) on the X41 edge connector, which is supplied with the control. If a system control is present, also connect terminal 3 (DCF) of the edge connector.

6.18 Connecting the domestic hot water cylinder's temperature sensor

- Connect a temperature sensor to the fed cable on the X22 terminal block (connection terminals 19/20) on the control PCB. The range of accessories includes a temperature sensor (VR 10) with corresponding mating connector and an extension with corresponding plug and bush.

6.19 Connecting the VR 70/VR 71 mixer module

1. Connect the power supply for the **VR 70/VR 71** mixer module to X314 on the power supply PCB.
2. Connect the **VR 70/VR 71** mixer module to the eBUS interface on the control PCB.

6.20 Connecting cascades

- If you want to use cascades (max. seven units), you must connect the eBUS line to contact X30 via the **VR32b** bus coupler (accessory).

6.21 Closing the electronics box for the power supply PCB

1. Tighten all of the screws on the strain relief clamps.
2. Close the cover on the electronics box.
3. Hinge the electronics box back up.

6.22 Checking the electrical installation

- After the installation is complete, check the electrical installation to ensure that the connections that have been established are secured properly and are sufficiently insulated.


7 Operation

7.1 Operating concept of the product

The operating concept and the read-out and setting options of the end user level are described in the operating instructions.

8 Start-up

8.1 Prioritising diverter valve, setting the heating circuit/cylinder charging

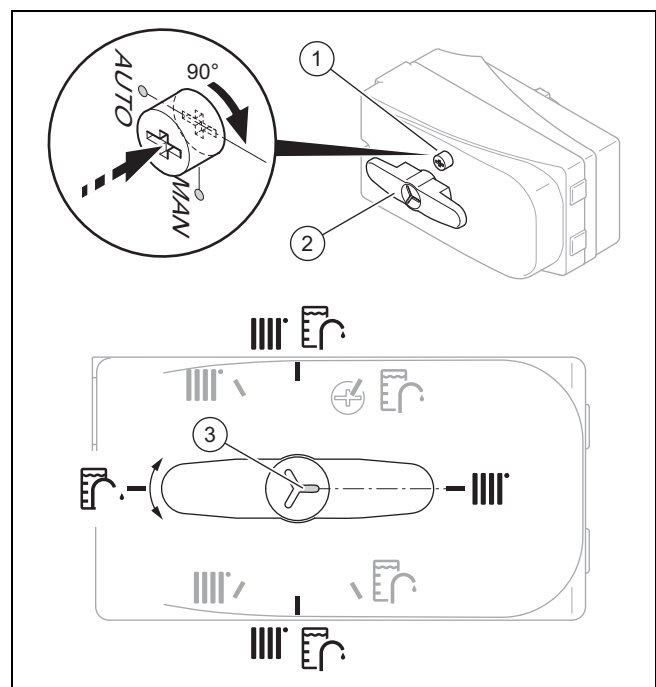

1. If you want to manually set the prioritising diverter valve, press the knob (1) and turn it 90° clockwise.
 - ◁ You can now turn the selection lever (2) to the required position.



Note

The notch (3) that points to the selection lever's extension displays the position of the selection lever. You can turn the selection lever by 90° each time to select heating, cylinder charging and the mid-position between heating/cylinder charging (black). In automatic mode, the selection lever can move to other intermediate positions (grey).

2. If you want to actuate the heating circuit, turn the selection lever (2) to "Heating circuit".
3. If you want to actuate the domestic hot water cylinder, turn the selection lever to "Domestic hot water cylinder".

4. If you want to actuate the heating circuit and the domestic hot water cylinder, turn the selection lever to "Heating circuit/domestic hot water cylinder".

8.2 Checking and treating the heating water/filling and supplementary water



Caution.

Risk of material damage due to poor-quality heating water

- Ensure that the heating water is of sufficient quality.

- Before filling or topping up the installation, check the quality of the heating water.

Checking the quality of the heating water

- Remove a little water from the heating circuit.
- Check the appearance of the heating water.
- If you ascertain that it contains sedimentary materials, you must desludge the installation.
- Use a magnetic rod to check whether it contains magnetite (iron oxide).
- If you ascertain that it contains magnetite, clean the installation and apply suitable corrosion-inhibition measures (e.g. fit a magnetite separator).
- Check the pH value of the removed water at 25 °C.
- If the value is below 8.2 or above 10.0, clean the installation and treat the heating water.
- Ensure that oxygen cannot get into the heating water.

Checking the filling and supplementary water

- Before filling the installation, measure the hardness of the filling and supplementary water.

Treating the filling and supplementary water

- Observe all applicable national regulations and technical rules when treating the filling and supplementary water.

Provided the national regulations and technical rules do not stipulate more stringent requirements, the following applies:

You must treat the filling and supplementary water in the following cases

- If the entire filling and supplementary water quantity during the operating life of the system exceeds three times the nominal volume of the heating installation, or
- If the guideline values listed in the following table are not met, or
- If the pH value of the heating water is less than 8.2 or more than 10.0.

Total heating output	Water hardness at specific system volume ¹⁾					
	≤ 20 l/kW		> 20 l/kW ≤ 40 l/kW		> 40 l/kW	
kW	ppm CaCO ₃	mol/ m ³	ppm CaCO ₃	mol/ m ³	ppm CaCO ₃	mol/ m ³
< 50	< 300	< 3	150	≤ 1.5	5	0.05
> 50 to ≤ 200	200	< 2	150	≤ 1.5	5	0.05
> 200 to ≤ 600	150	< 1.5	5	0.05	5	0.05
> 600	5	0.05	5	0.05	5	0.05

1) Nominal capacity in litres/heat output; in the case of multi-boiler systems, the smallest single heat output is to be used.



Caution.

Risk of material damage if the heating water is treated with unsuitable additives.

Unsuitable additives may cause changes in the components, noises in heating mode and possibly subsequent damage.

- Do not use any unsuitable antifreeze and corrosion inhibitors, biocides or sealants.

No incompatibility with our products has been detected to date with proper use of the following additives.

- When using additives, follow the manufacturer's instructions without exception.

We accept no liability for the compatibility of any additive or its effectiveness in the rest of the heating system.

Additives for cleaning measures (subsequent flushing required)

- Adey MC3+
- Adey MC5
- Fernox F3
- Sentinel X 300
- Sentinel X 400

Additives intended to remain permanently in the installation

- Adey MC1+
- Fernox F1
- Fernox F2
- Sentinel X 100
- Sentinel X 200


Additives for frost protection intended to remain permanently in the installation

- Adey MC ZERO
- Fernox Antifreeze Alphi 11
- Sentinel X 500


- If you have used the above-mentioned additives, inform the end user about the measures that are required.
- Inform the end user about the measures required for frost protection.

8.3 Filling and purging the heating installation

1. Flush the heating installation thoroughly prior to filling.
2. Open all of the thermostatic valves on the heating installation and, if required, all other isolation valves.
3. If no domestic hot water cylinder is connected, seal the product's cylinder flow and cylinder return connection with on-site plugs.
4. Check all of the connections and the entire heating installation for leaks.
5. Switch the prioritising diverter valve to manual operation (→ Section 8.1) and turn the selection lever to "Heating circuit/domestic hot water cylinder".
 - ◁ Both valves are open and the filling procedure is improved since the air in the system can escape.
 - ◁ The heating circuit and the spiral immersion heater for the domestic hot water cylinder are filled at the same time.

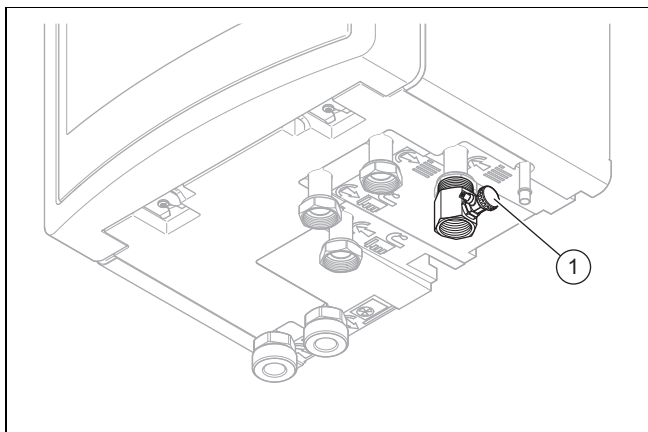

6. Connect a filling hose to the filling device (1).
7. To do this, unscrew the screw cap from the filling device and secure the free end of the filling hose to here.

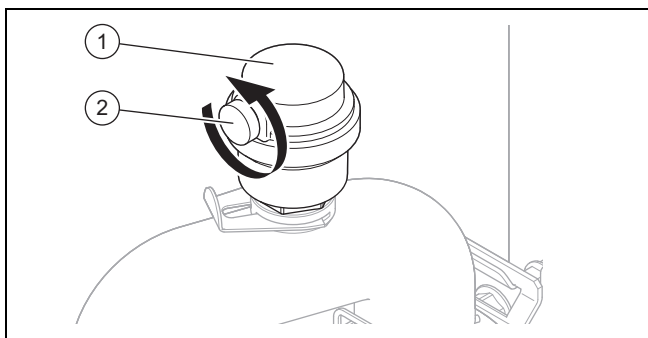

8. Open the purging screw (2) on the automatic air vent (1) in order to purge the product.
9. Open the filling device.
10. Open the heating water supply slowly.
11. Purge the highest radiator or underfloor heating circuit and wait until the circuit is completely purged.
 - ◁ The water must escape from the purging valve without bubbles.
12. Fill with water until the manometer (on-site) shows that the heating installation has reached a pressure of approx. 1.5 bar.



Note

If you fill the heating circuit at an external location, you must install an additional manometer to check the pressure in the installation.

13. Close the filling device.
14. Then check the heating installation pressure again (if required, repeat the filling procedure).
15. Remove the filling hose from the filling device and screw the screw cap back on.
16. Set automatic mode for the prioritising diverter valve again (→ Section 8.1).
 - ◁ When the product starts up, the diverter valve automatically moves to the "Heating circuit" outlet position.

8.4 Purging

1. Open the automatic air vent.
2. Start the purge programme for the building circuit P06 using: **Menu → Installer level → Test menu → Check programmes → Purge building circuit.**
3. Allow the P06 function to run for 15 minutes.
4. Once both purge programmes have finished, check whether the pressure in the heating circuit is 150 kPa (1.5 bar).
 - ◁ Top up with water if the pressure is below 150 kPa (1.5 bar).

8.5 Switching on the product



Note

The product does not have an on/off switch. The product is switched on as soon as it is connected to the power grid.

1. Use the partition that is installed on-site to switch the product on.
 - ◁ The display shows the basic display.
 - ◁ The basic display appears on the system control display.
 - ◁ The system's products start up.
 - ◁ The heating and domestic hot water demand are activated by default.
2. When you start up the heat pump system for the first time after electrical installation, the installation assistants for the system components will start automatically. Set the required values on the control panel of the indoor unit first, then on the optional system control and the other system components.

8.6 Running the installation assistants

The installation assistant is launched when the product is switched on for the first time. It provides direct access to the most important check programmes and configuration settings for starting up the product.

Confirm the launch of the installation assistant. All heating and domestic hot water demands are blocked whilst the installation assistant is active.

Set the following parameters:

- Language
- System control present
- Immersion heater power supply (electric back-up heater)
- Immersion heater power limit (electric back-up heater)
- Cooling technology
- Compressor current limit
- Relay multi-function output
- Intermediate heat exchanger present
- Check programme: Purge building circuit
- Contact details, Telephone number

To access the next item, confirm by pressing **Next** in each case.

If you do not confirm the launch of the installation assistant, it is closed 10 seconds after you switch on the unit and the basic display then appears. If the installation assistant does not run through completely, it restarts the next time the unit is switched on.

8.6.1 Ending the installation assistant

1. Once you have run through the installation assistant successfully, confirm by pressing .
 - ◁ The installation assistant will close and will not launch again when the product is next switched on.
2. Observe the corresponding sections and information in the system instructions.

8.7 Menu functions without the optional system control

If no system control is installed and this has been confirmed in the installation assistant, the following additional functions are displayed in the product's control panel:

- End user level
 - **Room temperature setpoint**
 - **Screed drying activ.**
 - **Target cylinder temp.**
 - **Domestic hot water cylinder temp.**
 - **Manual cooling activation**
- Installer level
 - **Heat curve**
 - **Summer sw.-off temp.**
 - **Heating div. point**
 - **DHW bivalence point**
 - **Heating alt. point**
 - **Max. flow temperature**
 - **Min. flow temperature**
 - **Heating mode activ.**
 - **DHW activation**
 - **Cyl. charg. hysteresis**
 - **Limp home mode Immersion heater: Heating/DHW**
 - **Cooling target flow**
 - **Screed drying day**

If the system control has been retroactively removed or a defect is present, you must reset the product to the factory setting and select the system control in the installation assistant in order to obtain the additional functions in the product's control panel.

8.8 Energy balance control

The energy balance is the integral from the difference between the flow temperature actual value and target value, which is added up every minute. If the set heat deficit (WE = -60°min in heating mode) is reached, the heat pump starts. If the supplied heat volume corresponds to the heat deficit (integral = 0°min), the heat pump is switched off.

The energy balancing is used for heating and cooling mode.

8.9 Compressor hysteresis

The heat pump is switched on and off via the compressor hysteresis for heating mode and also for energy balancing. When the compressor hysteresis is above the target flow temperature, the heat pump is switched off. When the hysteresis is below the target flow temperature, the heat pump starts up again.

8.10 Enabling the electric back-up heater

On the system control, you can select whether the electric back-up heater is to be used for heating mode, domestic hot water mode or both modes. Set the maximum output for the electric back-up heater at the indoor unit's control panel here.

The electric back-up heater is controlled automatically and according to demand.

- ▶ Activate the internal electric back-up heater with one of the output levels.
- ▶ You can find the output levels for the electric back-up heater in the tables in the appendix.
5.4 kW back-up heater at 230 V and at 400 V (→ Appendix I)
- ▶ Ensure that the maximum output for the electric back-up heater does not exceed the output of the fuse protection for the household electricity system; for rated currents, see Technical data. (→ Appendix N)

8.11 Setting the anti-legionella function

- ▶ Set the anti-legionella function using the system control.

To ensure sufficient anti-legionella protection, the electric back-up heater must be activated.

Condition: Internal electric back-up heater deactivated or external back-up heater

The anti-legionella function can be used without a back-up heater in the outdoor temperature range of -10 °C to +30 °C; outside of this temperature range, the function can only be used with an activated internal or external back-up heater.

An external back-up heater must be protected against overheating, for example, so that it is intrinsically safe. An external back-up heater must be connected to contact X14 via a cut-off relay. On the indoor unit's control, the setting must be converted to the external back-up heater under **MO relay**.

Menu → Installer level → Configuration.

8.12 Purging

You can use the installation assistant to run through the purging programmes.

- ▶ To do this, read the purging section. (→ Section 8.4)

8.13 Calling up the installer level

1. Press  and  at the same time.
2. Navigate to **Menu** → **Installer level** and confirm by pressing  (OK).
3. Set the value **17** and confirm by pressing .

8.14 Restarting the installation assistants

You can restart the installation assistant at any time by calling it up in the menu.

Menu → **Installer level** → **Start inst. assistant**.

8.15 Checking the configuration

You can recheck and set the most important system parameters. Call up **Configuration** to configure the menu item.

Menu → **Installer level** → **Configuration**.

8.16 Calling up statistics

Menu → **Installer level** → **Test menu** → **Statistics**

You can use this function to call up the statistics for the heat pump.

8.17 Floor drying



Caution.

Risk of damage to the product caused by impermissible purging

Without purging the heating circuit, the system may become damaged.

- If the screed drying is activated without a system control, purge the system manually. No automatic purging takes place.

You can use this function to "dry heat" freshly laid screed in accordance with the construction regulations, according to a defined time and temperature schedule. To do this, the outdoor unit must be available and connected. The system control does not have to be connected for this.

It is activated via **Installer level** → **Resets**. See overview of the installer levels in the appendix.

When screed drying is activated, all the selected operating modes are interrupted. The function controls the flow temperature of the controlled heating circuit according to a pre-set programme, regardless of the outdoor temperature.

The display shows the target flow temperature. You can manually set the current day.

Days after starting the function	Target flow temperature for this day [°C]
1	25
2	30
3	35
4	40
5	45
6–12	45
13	40
14	35
15	30

Days after starting the function	Target flow temperature for this day [°C]
16	25
17–23	10 (frost protection function, pump in operation)
24	30
25	35
26	40
27	45
28	35
29	25

The day is always changed at 00:00, irrespective of when the function starts.

After a mains Off/On, screed drying starts with the last active day.

The function ends automatically when the last day of the temperature profile has elapsed (day = 29) or if you set the start day to 0 (day = 0).

8.17.1 Activating the screed drying

1. Press the reset button.
2. When restarting the display, press and hold the  button until the language selection opens.
3. Set the required language. (→ Section 4.4.8)
4. Press the  button in order to select the power supply for the back-up boiler.
5. Press the  button in order to select the output of the back-up boiler.
6. Press the  button in order to select the start day for the screed drying.
 - ◁ The screed drying is started and the display shows the current flow temperature and the right-hand status bar shows the system pressure.
7. In the current programme, call up the current status messages for the system in the display.
8. To do this, press the  and  buttons at the same time.
9. If required, change the settings for the function in the current programme.
10. Return to the programme steps in order to change the settings or the current day.
 - ◁ If the screed drying has not been run successfully by day 29, the display shows the message **Screed drying ending**.
 - ▽ If a fault occurs during screed drying, the display shows the message **Fault**.
 - Select a new start day for the screed drying or interrupt the process.

8.18 Activating cooling mode

- ▶ Go to the indoor unit's control panel.
- ▶ Navigate to: **Menu** → **Installer level** → **Configuration** → **Cooling technology**.
- ▶ Select: **Active cooling**.
- ▶ If this involves a heat pump cascade, implement this setting for every heat pump with cooling function.

Condition: System control connected

- ▶ Go to the system control.
- ▶ Activate cooling mode (→ Installation instructions for the system control).

8.19 Starting up the optional system control

The following work for starting up the system was carried out:

- The system control and the outdoor temperature sensor have been installed and wired.
- Start-up of all system components (except for the system control) is complete.

Follow the installation assistant and the operating and installation instructions for the system control.

8.20 Displaying the filling pressure in the building circuit

The product has a pressure sensor in the heating circuit and a digital pressure display.

- ▶ Select **Menu Live Monitor** to display the filling pressure in the building circuit.
 - ◁ To ensure that the building circuit works correctly, the filling pressure must be between 1 bar and 1.5 bar. If the heating installation extends over several storeys, higher filling pressures may be required to avoid air entering the heating installation.

8.21 Checking function and leak-tightness

Before you hand the product over to the end user:

- ▶ Check the heating installation (heat generator and system) and the domestic hot water pipes for tightness.
- ▶ Check whether the drain pipework for the purging connections has been installed correctly.

8.21.1 Checking the heating mode

- ▶ Start check programme P.04.

8.21.2 Checking the domestic hot water generation

- ▶ Check whether the cylinder is purged and the domestic hot water temperature is reached.

9 Adapting the unit to the heating installation

9.1 Configuring the heating installation


To adjust the water flow rate that is created by the heat pump to the relevant installation, the maximum available remaining feed head can be set for the heat pump in heating and domestic hot water mode and the output of the building circuit pump for heating, cooling and domestic hot water.

Since the heat pump installation regulates the building circuit pump at the nominal flow in automatic mode, only set the parameters where required.

You can call up these parameters via **Menu** → **Installer level** → **Configuration**.

The adjustment range for the remaining feed head is between 20 kPa (200 mbar) and 90 kPa (900 mbar). The heat pump operates at its optimum level when the nominal flow can be achieved by setting the available pressure ($\Delta T = 5 \text{ K}$).

9.2 Total pressure loss in the product, heating circuit and domestic hot water

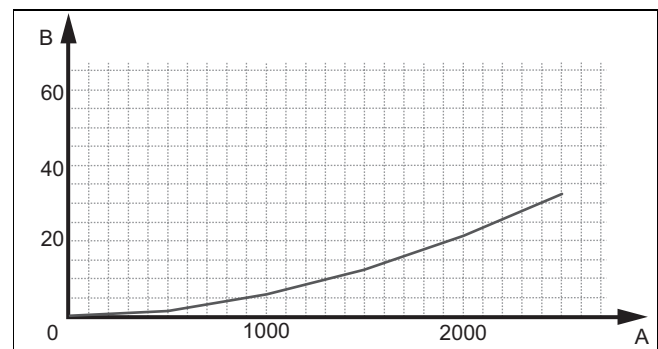

A Flow rate in the building circuit (l/h) B Pressure loss (kPa)

9.3 Setting the flow temperature in heating mode (with no control connected)

1. Press (III).
 - ◁ The display shows the flow temperature in heating mode.
2. Change the flow temperature in heating mode by pressing or .
- Max. heating mode target flow temperature: 75 °C
3. Confirm this change by pressing (OK).

9.4 Instructing the end user



Danger!

Risk of death from legionella.

Legionella multiply at temperatures below 60 °C.

- ▶ Ensure that the end user is familiar with all of the Anti-legionella measures in order to comply with the applicable regulations regarding legionella prevention.

- ▶ Explain to the end user how the safety devices work and where they are located.

- ▶ Inform the end user about all of the anti-legionella measures.
- ▶ Inform the end user how to handle the product.
- ▶ Draw particular attention to the safety warnings, which the end user must follow.
- ▶ Inform the end user that they must have the product maintained in accordance with the specified intervals.
- ▶ Explain to the end user how to check the system's water volume/filling pressure.
- ▶ Pass all of the instructions and documentation for the product to the end user for safe-keeping.

10 Troubleshooting

10.1 Contacting your service partner

If you contact your service partner, please mention if possible:

- The fault code that is displayed (**F.xx**)
- The status code (**S.xx**) that is displayed by the product in the Live Monitor

10.2 Displaying the Live Monitor (current product status)

Menu → Live Monitor

Status codes in the display provide information on the product's current operating mode. These can be called up via the **Live Monitor** menu.

Status codes (→ Appendix F)

10.3 Checking fault codes

The display shows a fault code **F.xxx**.

Fault codes have priority over all other displays.

If multiple faults occur at the same time, the display shows the corresponding fault codes for two seconds each in sequence.

- ▶ Eliminate the fault.
- ▶ To start up the product again, press the reset button (Operating instructions).
- ▶ If you are unable to eliminate the fault and the fault recurs despite several reset attempts, contact Customer Service.

10.4 Querying the fault memory

Menu → Installer level Fault list

The product has a fault memory. You can use this to query the last ten faults that occurred in chronological order.

Display views:

- Number of faults that occurred
- The fault that is currently selected with fault number **F.xxx**
- A plain text display explaining the fault.
- ▶ Use the  or  button to display the last ten faults that occurred.

10.5 Resetting the fault memory

- ▶ Press  twice and then **Delete** and **OK** to delete the fault list.

10.6 Using the function menu

You can use the function menu to actuate and test individual components of the product during the fault diagnostics. (→ Section 10.8)

10.7 Using check programmes

You can call up the check programmes via **Menu → Installer level → Test menu → Check programme**.

You can activate various special functions in the product by using various check programmes.

If the product is in error condition, you cannot start any check programmes. You can detect an error condition by the fault symbol shown in the left bottom corner of the display. You must first reset.

To end the check programmes, you can press **Cancel** at any time.

10.8 Carrying out the actuator test

Menu → Installer level → Test menu → Sensor/actuator test

You can check that the components of the heating installation are functioning correctly using the sensor/actuator test. You can actuate more than one actuator at a time.

If you do not select anything to change, you can have the current control values for the actuators and the sensor values displayed.

You can find a list of the sensor characteristic values in the appendix.

Characteristic values for the internal temperature sensors, hydraulic circuit (→ Appendix K)

Characteristic values for the VRC DCF outdoor temperature sensor (→ Appendix M)

10.9 Resetting parameters to factory settings

- ▶ Select **Menu → Menu → Installer level → Resets** to reset all of the parameters at the same time and to restore the product to the factory settings.

10.10 Preparing the repair work

1. Switch off the power supply.
2. Remove the front casing.
3. Close the service valves in the heating flow and in the heating return.
4. Close the service valve in the cold water pipe.
5. Drain the product if you want to replace water-bearing components of the product.
6. Ensure that water does not drip on live components (e.g. the electronics box).
7. Use only new seals.


10.11 Safety cut-out

The product has a safety cut-out.

If the safety cut-out has tripped, the cause must be eliminated and the safety cut-out replaced.

- ▶ See the "Fault codes" table in the appendix.
- ▶ Check the back-up heater for damage due to overheating.
- ▶ Check that the power supply for the power supply PCB is working properly.
- ▶ Check the cabling for the power supply PCB.
- ▶ Check the cabling for the electric back-up heater.
- ▶ Check that all temperature sensors are working properly.
- ▶ Check that all other sensors are working properly.
- ▶ Check the pressure in the heating circuit.
- ▶ Check that the heating circuit pump is working properly.
- ▶ Check whether there is air in the heating circuit.

10.11.1 Replace the safety cut-out

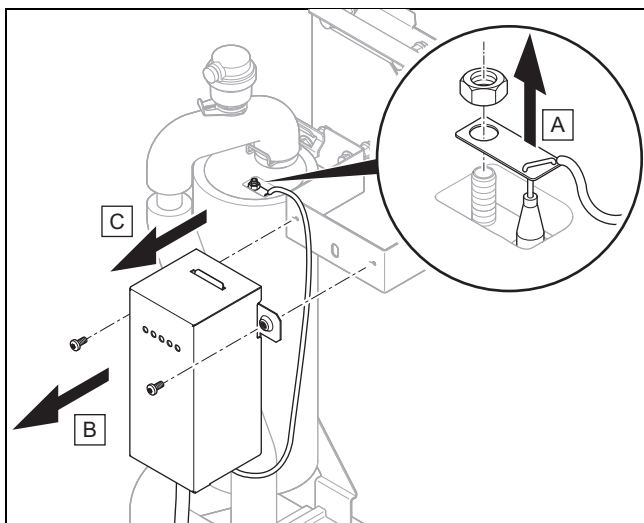

1. Disconnect the product from the power grid and protect it against being switched back on.
2. Remove the front casing.
3. Open the power supply PCB's electronics box. (→ Section 6.5)
4. Remove the connection cable on the X302 terminal block.
5. Remove the temperature sensor's capillary tube on the electric back-up heater.
6. Remove both screws and remove the safety cut-out with the retainer from the product.
7. Install the new safety cut-out in reverse order.

11 Inspection and maintenance

11.1 Inspection and maintenance information

11.1.1 Inspection

The inspection is intended to determine the actual condition of a product and compare it with the target condition. This is done by measuring, checking and observing.

11.1.2 Maintenance

Maintenance is required in order to eliminate any deviations between the actual condition and the target condition. This is normally done by cleaning, setting and, if necessary, replacing individual components that are subject to wear.

11.2 Procuring spare parts

The original components of the product were also certified by the manufacturer as part of the declaration of conformity. If you use other, non-certified or unauthorised parts during maintenance or repair work, this may result in the product no longer meeting the applicable standards, thereby voiding the conformity of the product.

We strongly recommend that you use original spare parts from the manufacturer as this guarantees fault-free and safe operation of the product. To receive information about the available original spare parts, contact the contact address provided on the back page of these instructions.

- ▶ If you require spare parts for maintenance or repair work, use only the spare parts that are permitted for the product.

11.3 Checking maintenance messages

If the  symbol is shown in the display, the product requires maintenance work or the product is in comfort protection mode.

- ▶ To obtain further information, call up the **Live Monitor**.
- ▶ Carry out the maintenance work that is listed in the table. Maintenance messages (→ Appendix G)

Condition: Lhm.XX is displayed

The product is in Comfort protection mode. The product has detected a permanent fault and continues to run with restricted comfort.

- ▶ To determine which component is defective, read the fault memory (→ Section 10.4).



Note

If a fault message is present, the product remains in comfort protection mode after it is reset. After the product is reset, the fault message is displayed first before the message **Limp home mode (comfort protection)** appears again.

- ▶ Check the component that is displayed and replace it.

11.4 Observing inspection and maintenance intervals

- ▶ Adhere to the minimum inspection and maintenance intervals. Carry out all of the work that is listed in the "Inspection and maintenance work" table in the appendix.
- ▶ Carry out maintenance work on the product at an earlier point if the results of the inspection that was carried out during previous maintenance make this necessary.


11.5 Preparing for inspection and maintenance

Observe the basic safety rules before carrying out inspection and maintenance work or installing spare parts.

- ▶ Switch off the product.
- ▶ Disconnect the product from the power supply.
- ▶ Secure the product against being switched back on again.
- ▶ When working on the product, protect all electric components from spraying water.
- ▶ Remove the front casing.

11.6 Checking the pre-charge pressure of the expansion vessel

1. Close the service valves and drain the heating circuit. (→ Section 12.1)

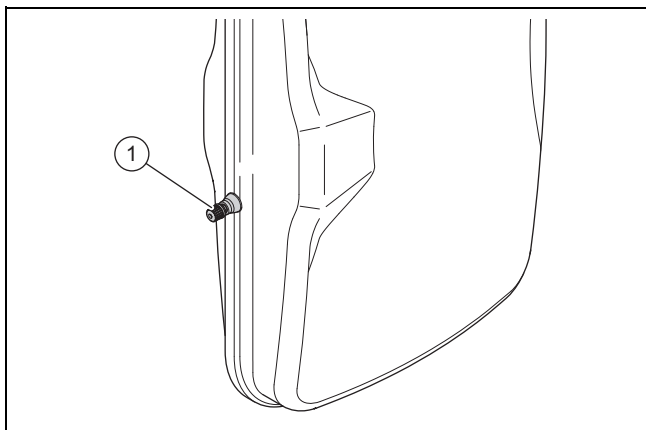

2. Measure the pre-charge pressure of the expansion vessel at the valve (1).

Result:



Note

The required pre-charge pressure of the heating installation may vary depending on the static pressure (0.1 bar per metre in height).

Pre-charge pressure is below 0.75 bar (± 0.1 bar/m)

- ▶ Fill the expansion vessel with nitrogen.
3. Fill the heating circuit. (→ Section 8.3)

11.7 Checking the high-pressure switch-off

- ▶ Start check programme P.29 **High pressure**.
 - ◁ The compressor starts and the flow rate monitoring for the pump is deactivated.
- ▶ Block the heating circuit.
 - ◁ The product is switched off by the high-pressure switch-off.

11.8 Checking and correcting the filling pressure of the heating installation

If the filling pressure falls below the minimum pressure, a maintenance message is shown on the display.

- Min. heating circuit pressure: ≥ 0.05 MPa (≥ 0.50 bar)
- ▶ Top up the heating water in order to start up the heat pump again; Filling and purging the heating installation (→ Section 8.3).
- ▶ If you notice frequent pressure losses, determine and eliminate the cause.


11.9 Completing inspection and maintenance

1. Start up the heat pump system.
2. Check that the heat pump system is working without any problems.

12 Draining

12.1 Draining the product's heating circuit

1. Close the service valves in the heating flow and in the heating return.
2. Remove the front casing. (→ Section 4.8)

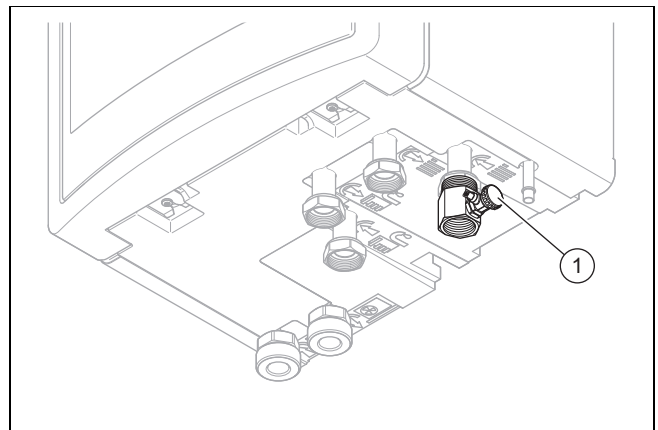

3. Connect a hose to the filling device (1) and guide the ends of the hose to a suitable drainage point.
4. Use manual actuation to move the prioritising diverter valve to the "Heating circuit/domestic hot water cylinder" position. (→ Section 8.1)
5. Open the stopcock on the filling device.
6. Open the automatic air vent.
7. Use the expansion relief valve to check whether the heating circuit has been completely drained.
 - ◁ Residual hot water may escape from expansion relief valve's drain.

13 Decommissioning

13.1 Temporarily decommissioning the product

1. Switch off all of the disconnectors to which the product is connected in the building.
2. Disconnect the product from the power supply.

13.2 Permanently decommissioning the product

- ▶ Switch off all of the disconnectors to which the product is connected in the building.
- ▶ Disconnect the product from the power supply.
- ▶ Close the cold-water stopcock.
- ▶ Close the stopcocks.
- ▶ Drain the product.
- ▶ Dispose of or recycle the product and its components.

14 Recycling and disposal

14.1 Disposing of the product and accessories

- ▶ Do not dispose of the product or the accessories with household waste.
- ▶ Dispose of the product and all accessories correctly.
- ▶ Observe all relevant regulations.


15 Customer service

Validity: Great Britain AND Vaillant

For contact details for our customer service department, you can write to the address that is provided on the back page, or you can visit www.vaillant.co.uk.


Appendix

A Functional diagram

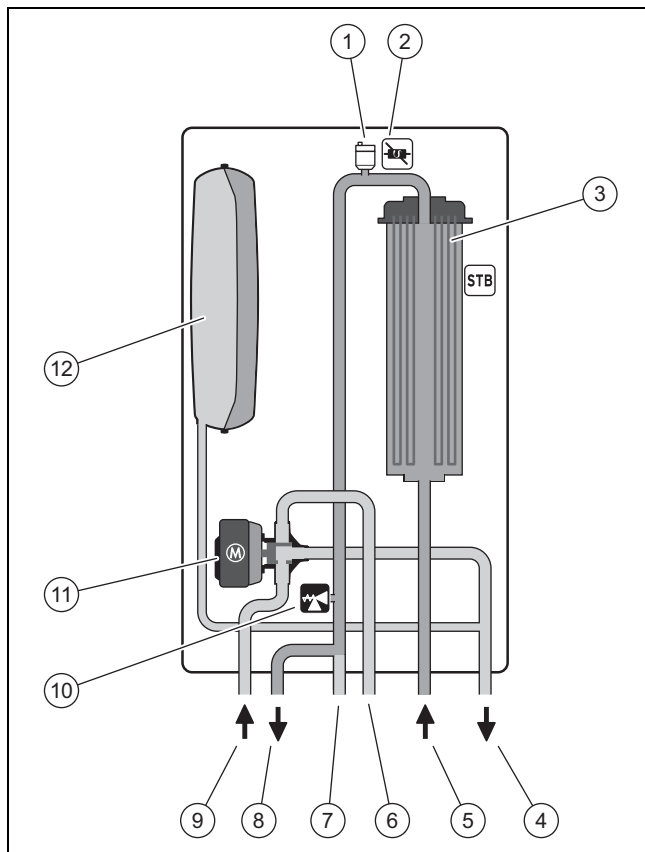


- | | | | |
|---|---|----|---|
| 1 | Automatic air vent | 7 | Heating circuit, flow, domestic hot water |
| 2 | Flow temperature sensor: Electric back-up heater output | 8 | Building circuit, flow, heating |
| 3 | Back-up heater | 9 | Building circuit, return, heating |
| 4 | Heating return to the outdoor unit | 10 | Expansion relief valve, 3 bar |
| 5 | Heating flow from the outdoor unit | 11 | Prioritising diverter valve |
| 6 | Heating circuit, return, domestic hot water | 12 | Diaphragm expansion vessel |

B Wiring diagram

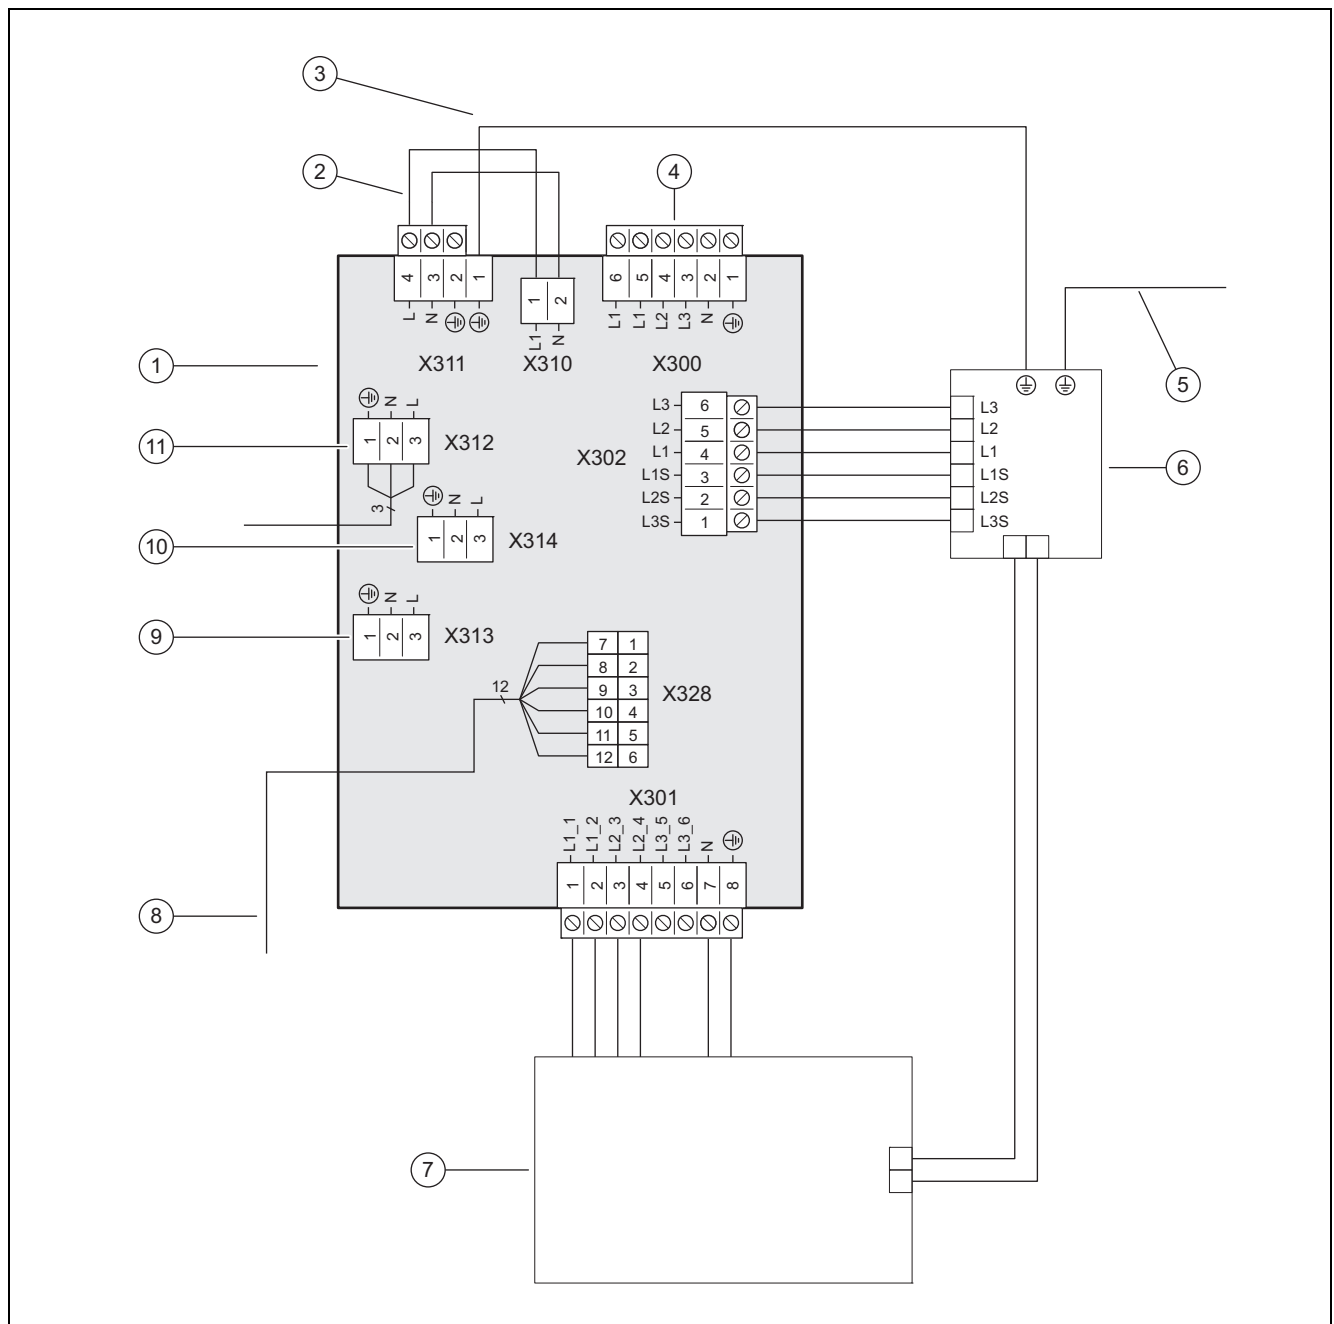


1	Power supply PCB	8	[X328] Data connection to the control PCB
2	For single power supply: 230 V bridge between X311 and X310; for dual power supply: Replace the bridge at X311 with the 230 V connection	9	[X313] Power supply for the control PCB or the optional VR 70/VR 71 or the optional external current anode
3	Earthing	10	[X314] Power supply for the control PCB or the optional VR 70/VR 71 or the optional external current anode
4	[X300] Power supply connection	11	[X312] Power supply for the control PCB or the optional VR 70/VR 71 or the optional external current anode
5	Earth wire to X1 on the control PCB		
6	[X302] Safety cut-out		
7	[X301] Back-up heater		

C Basic connection diagram for the energy supply company lockout, shutdown via connection S21

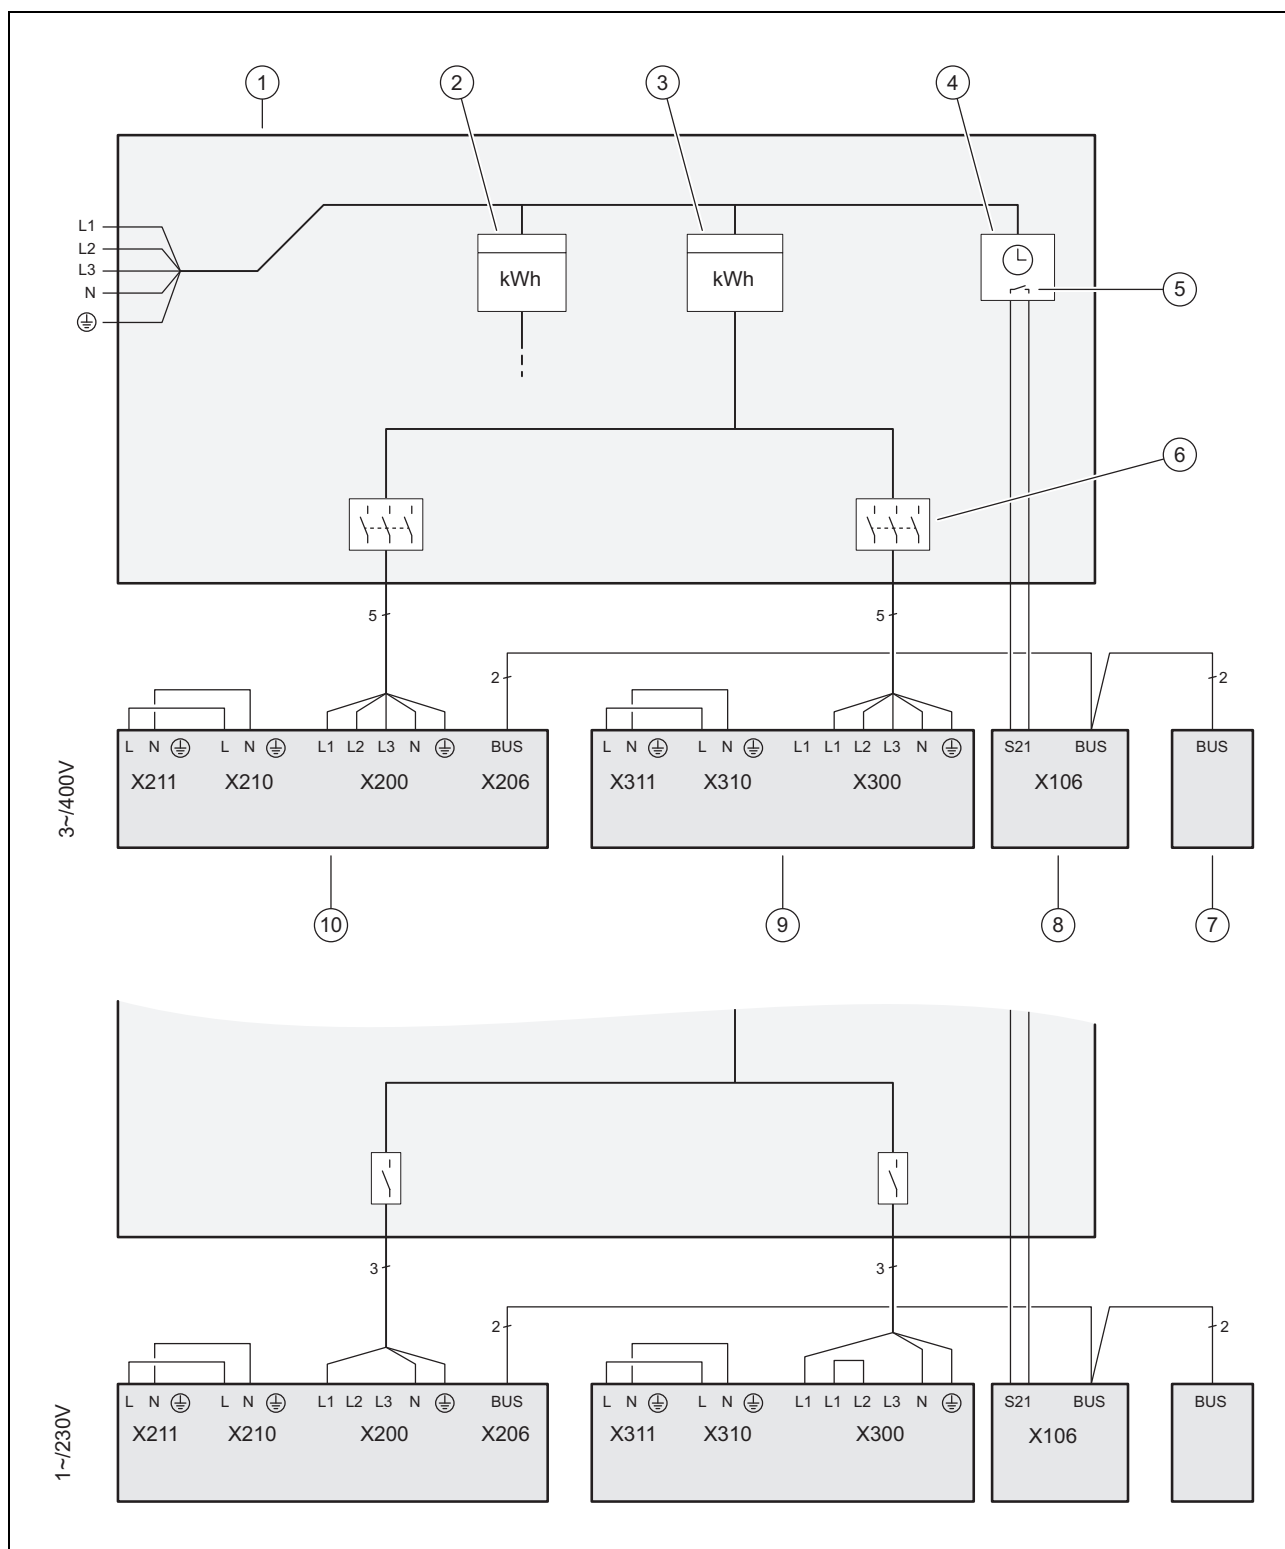

- | | | | |
|---|---|----|--------------------------------------|
| 1 | Meter/fuse box | 6 | Disconnector (circuit breaker, fuse) |
| 2 | Household electricity meter | 7 | System control |
| 3 | Heat pump electricity meter | 8 | Indoor unit, control PCB |
| 4 | Ripple control receiver | 9 | Indoor unit, power supply PCB |
| 5 | Potential-free normally open contact, for actuating S21, for the energy supply company lockout function | 10 | Outdoor unit, PCB INSTALLER BOARD |

D Basic connection diagram for the energy supply company lockout, shutdown via partition

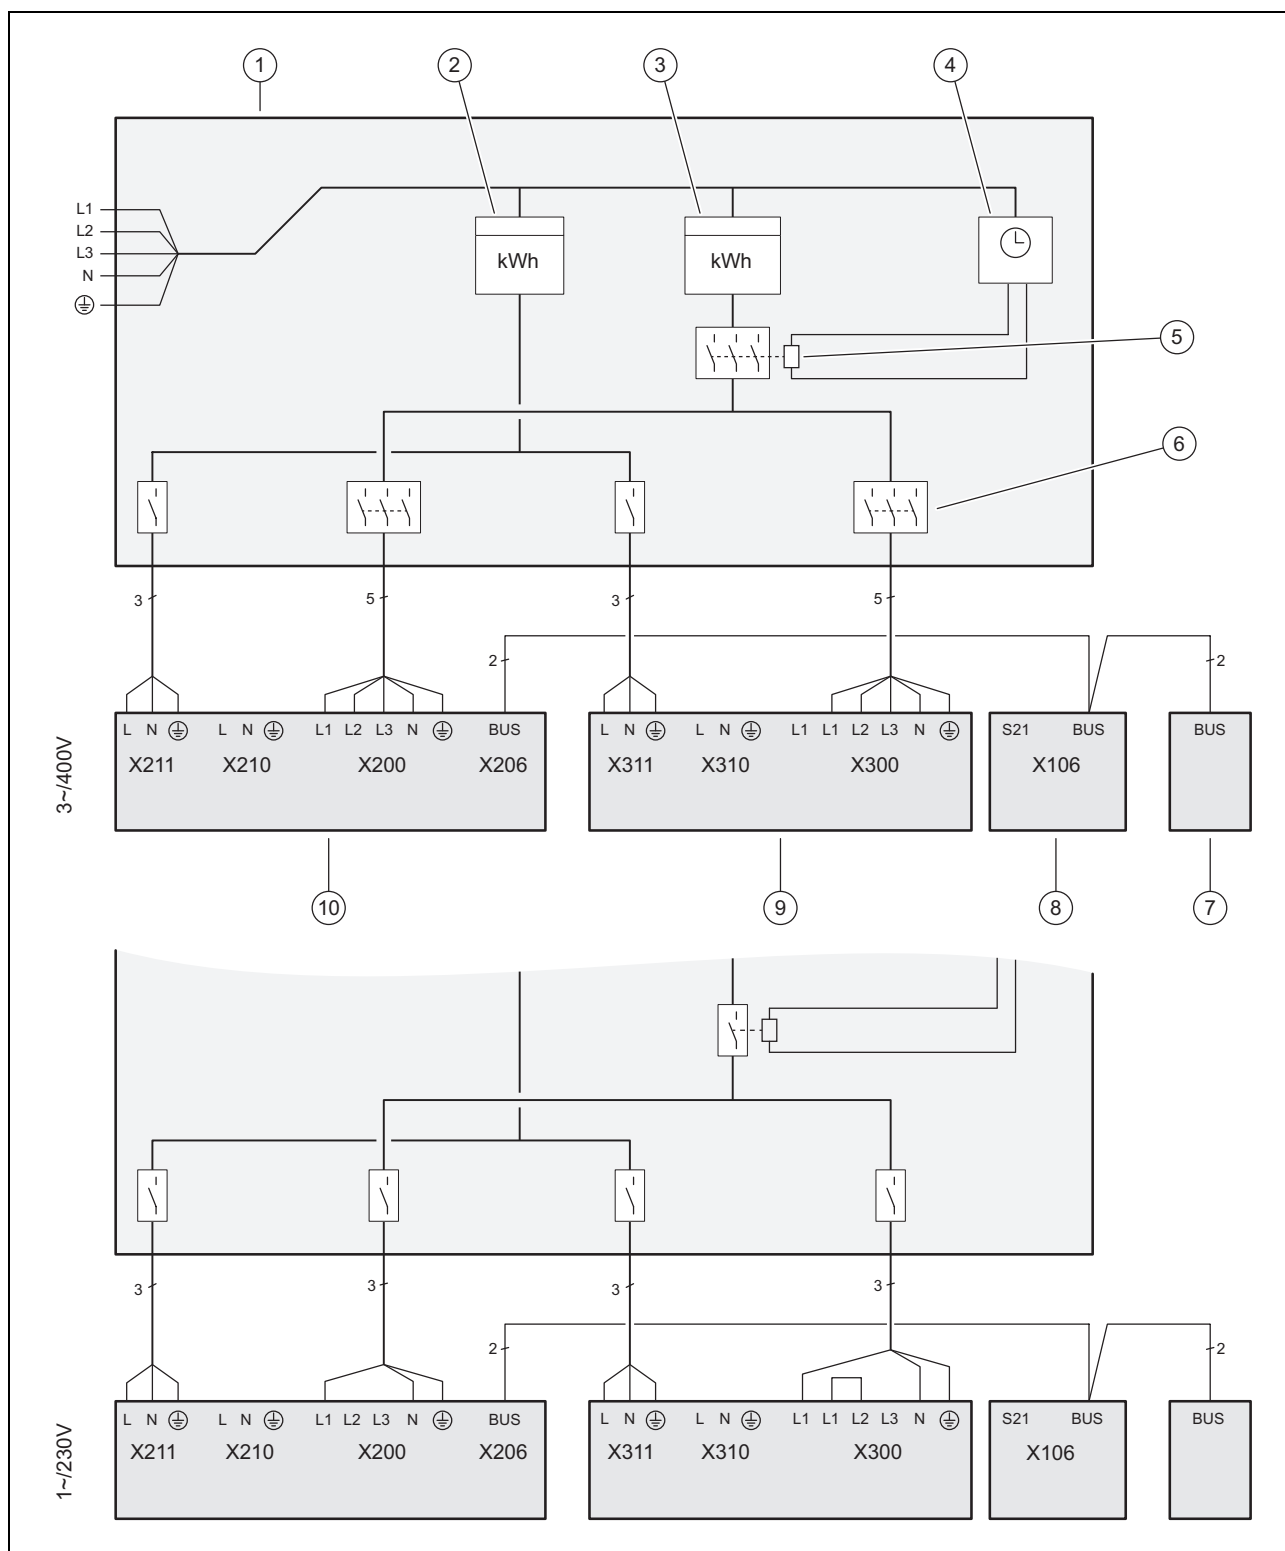

- | | | | |
|---|---|----|--------------------------------------|
| 1 | Meter/fuse box | 6 | Disconnecter (circuit breaker, fuse) |
| 2 | Household electricity meter | 7 | System control |
| 3 | Heat pump electricity meter | 8 | Indoor unit, control PCB |
| 4 | Ripple control receiver | 9 | Indoor unit, power supply PCB |
| 5 | Partition, for the energy supply company lockout function | 10 | Outdoor unit, PCB INSTALLER BOARD |

E Installer level overview

Setting level	Values		Unit	Increment, select, explanation	Factory setting	Setting
	Min.	Max.				
Installer level →						
Enter code	00	99		1 (competent person code 17)	17	
Installer level → Fault list →						
F.XX – F.XX ¹⁾	Current value					
Installer level → Test menu → Statistics →						
Compressor hours	Current value		h			
Compressor starts	Current value					
Build. pump hours	Current value		h			
Build. pump starts	Current value					
4-port valve hours	Current value		h			
4-port valve sw. ops	Current value					
Fan 1 operating hours	Current value		h			
Fan 1 starts	Current value					
Fan 2 operating hours	Current value		h			
Fan 2 starts	Current value					
EEV steps	Current value					
DHW PDV switch. ops	Current value					
Im. heater power cons.	Current value		kWh			
Im. heater op. hours	Current value		h			
Im. heater switch. ops	Current value					
No. switch. ops	Current value					
Installer level → Test menu → Check programmes →						
P.04 Heating mode				Select		
P.06 Purge building circuit				Select		
P.11 Cooling mode				Select		
P.12 De-icing				Select		
P.27 Immersion heater				Select		
P.29 High pressure				Select		
Installer level → Test menu → Sensor/actuator test →						
T.0.01 Building circuit pump power	0	100	%	5, off	0	
T.0.17 Fan 1	0	100	%	5	0	
T.0.18 Fan 2	0	100	%	5	0	
T.0.19 Condensate tray heater	Off	On		On, Off	Off	
T.0.20 4-port valve	Off	On		On, Off	Off	
T.0.21 Position: EEV	0	100	%	5	0	
T.0.23 Heating coil compressor	Off	On		On, Off	Off	
T.0.40 Flow temperature	-40	90	°C	0.1		
T.0.41 Return temperature	-40	90	°C	0.1		

¹⁾ See the overview of fault codes: Fault lists are only available, and can only be deleted, if faults have occurred.

²⁾ This parameter does not appear if a system control is connected.

³⁾ This parameter is only available in the products with **S3** in the nomenclature

⁴⁾ This parameter only appears if a system control is connected.

Setting level	Values		Unit	Increment, select, explanation	Factory setting	Setting
	Min.	Max.				
T.0.42 Building circuit: Water Pressure	0	3	bar	0.1		
T.0.43 Building circuit: Flow rate	0	4000	l/h	1		
T.0.48 Air inlet temperature	-40	90	°C	0.1		
T.0.55 Compressor outlet temperature	-40	135	°C	0.1		
T.0.56 Compressor inlet temperature	-40	135	°C	0.1		
T.0.57 EEV outlet temperature	-40	90	°C			
T.0.59 Condenser outlet temperature	-40	90	°C	0.1		
T.0.63 High pressure	0	31.9	bar (abs)	0.1		
T.0.64 Low pressure	0	8	bar (abs)	0.1		
T.0.67 High-pressure switch	Closed	Open		Closed, Open		
T.0.85 Evaporation temperature	-40	90	°C	0.1		
T.0.86 Condensation temperature	-40	70	°C	0.1		
T.0.87 Overheating target value	-40	90	K	0.1		
T.0.88 Overheating actual value	-40	90	K	0.1 to 20 K are normal operating parameters		
T.0.89 Subcooling target value	-40	90	K	0.1		
T.0.90 Subcooling actual value	-40	90	K	0.1		
T.0.93 Compressor speed	0	120	Rotation/s	1		
T.0.123 Temperature switch: Compressor outlet	Open	Closed		Open, closed		
T.1.02 DHW prioritising diverter valve	Heating	Domestic hot water		Heating, domestic hot water	Heating	
T.1.44 Cylinder temperature	-40	90	°C	0.1		
T.1.46 Lockout contact S20	Closed	Open		Closed, Open	Closed	
T.1.69 Outdoor temperature	-40	90	°C	0.1		
T.1.70 System temperature	-40	90	°C	0.1		
T.1.71 DCF status	Current value			No DCF signal Validate DCF signal Valid DCF signal		
T.1.72 Lockout contact S21	Closed	Open		Closed, Open	Open	
T.1.119 MO1 output	Off	On		Off, On	Off	
T.1.124 Safety cut-out immersion heater	Closed	Open		Closed, Open	Closed	
T.1.125 MPI input	Current value					
T.1.126 MO2 output	Off	On		Off, On	Off	
T.1.127 MO output	Off	On		Off, On	Off	
Installer level → Configuration →						
Language	Current language			Languages available for selection	02 English	
Contact details → Telephone number	Phone number			0-9		
Heat curve ²⁾	0.4	4.0		0.1		
Summer sw.-off temp. ²⁾	10	90	°C	1		
¹⁾ See the overview of fault codes: Fault lists are only available, and can only be deleted, if faults have occurred. ²⁾ This parameter does not appear if a system control is connected. ³⁾ This parameter is only available in the products with S3 in the nomenclature ⁴⁾ This parameter only appears if a system control is connected.						

Setting level	Values		Unit	Increment, select, explanation	Factory setting	Setting
	Min.	Max.				
Heating biv. point ²⁾	-30	+20	°C	1		
DHW bivalence point ²⁾	-20	+20	°C	1		
Heating alt. point ²⁾	-20	+40	°C	Off 1		
Max. flow temperature ²⁾	15	90	°C	1		
Min. flow temperature ²⁾	15	90	°C	1		
Heating mode activ. ²⁾				On Off		
DHW activation ²⁾				On Off		
Cyl. charg. hysteresis ²⁾	3	20	K	1		
Immers. heater mode ²⁾				Off Heating+DHW Heating Domestic hot water		
Limp home mode ²⁾				Off Heating Domestic hot water Heating+domestic hot water		
Cooling target flow ²⁾	7	24	°C	1		
MO relay				None Fault signal Ext. immersion heater DHW 3WV		
Compr.start heat. from	-100	-30	°min	1	-60	
Compr.start cool. from	30	100	°min	1	60	
Compressor hyster. Heat.	0	15	K	Applies for heating mode only: 1	7	
Compressor hyster. Cool.	0	15	K	Applies for cooling mode only: 1	5	
Max. rem. feed head	200	900	mbar	10	900	
DHW mode	0 = ECO	2 = Balance		0 = ECO, 1 = Normal, 2 = Balance	0	
Max. anti-cycl. time	0	9	h	1	5	
Conf. heat. build. pump	50	100	% PWM	Auto	Auto	
Conf. cool. build. pump	50	100	% PWM	Auto	Auto	
Conf. DHW build. pump	50	100	% PWM	Auto	65	
Reset anti-cycl. time → Anti-cycl. time after pow. supp. switch-on	0	120	min	1	0	
Im. heater power supp.	230	400	V	230, 400		
Im. heater outp. range	External	9	kW	230 V: Max. 6 kW 400 V: Max. 9 kW	6 or 9	
Compr. current limit				1 5–7 kW: 13–16 A 12 kW: 20–25 A		
Fan boost ³⁾	52	70		1	70	
Compr. noise reduct. ⁴⁾	40	60	%	1	40	

¹⁾ See the overview of fault codes: Fault lists are only available, and can only be deleted, if faults have occurred.

²⁾ This parameter does not appear if a system control is connected.

³⁾ This parameter is only available in the products with **S3** in the nomenclature

⁴⁾ This parameter only appears if a system control is connected.

Setting level	Values		Unit	Increment, select, explanation	Factory setting	Setting
	Min.	Max.				
Only for products with cooling: Cooling technology	None	Active cooling		None, active cooling	None	
Intermediate heat exchanger	Yes	No		Yes, No		
Output limit signal received				Received, Not received		
Current output limit of the heat pump			kW	Output limit of the heat pump in kW		
Current output limit of the electric back-up heater			kW	Output limit of the electric back-up heater in kW		
Electric back-up heater connected	Yes	No		The parameters are displayed if MO relay : "Ext. immersion heater" and Im. heater outp. range : "External" are set.	Yes	
Software version	Current value of the control PCB (HMU indoor unit xxxx, HMU outdoor unit xxxx) and the display (AI xxxx)			xxxx.xx.xx		
Installer level → Resets →						
Statistics → Reset statistics?				Yes, No	No	
Maintenance messages → Reset maintenance message				Yes, No	No	
High-pressure switch → Reset fault?				Yes, No	No	
Factory settings → Restore factory settings				Yes, No	No	
Screed drying ²⁾				Off, 1–29	Off	
Installer level → Start inst. assistant →						
Language				Languages available for selection	02 English	
Syst. control avail.?	Yes	No		Yes, No		
Im. heater power supp.	230 V	400 V				
Im. heater outp. range	External	9	kW	230 V: 6 kW 400 V: 9 kW	6 or 9	
Cooling technology	No cooling	Active cooling				
Compr. current limit	13	25	A	1 5–7 kW: 13–16 A 12 kW: 20–25 A		
MO relay				None, fault signal, ext. immersion heater, DHW 3WV	None	
Intermediate heat exchanger	Yes	No		Yes, No		
Check program: Purge building circuit	Yes	No		Yes, No	No	
Contact details Telephone number	Phone number			0–9	Empty	
End the installation assistant?				Yes, back		

¹⁾ See the overview of fault codes: Fault lists are only available, and can only be deleted, if faults have occurred.

²⁾ This parameter does not appear if a system control is connected.

³⁾ This parameter is only available in the products with **S3** in the nomenclature

⁴⁾ This parameter only appears if a system control is connected.

F Status codes

Code	Meaning
Status external current anode	Anode not connected, Anode OK, Anode Fault
S.34 Heating mode: Frost protection	If the measured outdoor temperature falls below XX °C, the temperature of the heating circuit's flow and return is monitored. If the temperature difference exceeds the set value, the pump and compressor are started without a heat demand.
S.100 Standby	There is no heat demand or cooling demand. Standby 0: Outdoor unit. Standby 1: Indoor unit
S.101 Heating: Compressor shutdown	The heat demand is met, the demand is ended by the system control and the heat deficit is offset. The compressor is switched off.
S.102 Heating: Compressor blocked	The compressor is blocked for heating mode because the heat pump is outside of its application limits.
S.103 Heating: Prerun	The start conditions for the compressor in heating mode are checked. Start the other actuators for heating mode.
S.104 Heating: Compressor active	The compressor works in order to meet the heat demand.
S.107 Heating: Overrun	The heat demand is met, the compressor is switched off. The pump and fan overrun.
S.111 Cooling: Compressor shutdown	The cooling demand is met, the demand is ended by the system control. The compressor is switched off.
S.112 Cooling: Compressor blocked	The compressor is blocked for cooling mode because the heat pump is outside of its application limits.
S.113 Cooling: Compressor mode prerun	The start conditions for the compressor in cooling mode are checked. Start the other actuators for cooling mode.
S.114 Cooling: Compressor active	The compressor works in order to meet the cooling demand.
S.117 Cooling: Compressor mode overrun	The cooling demand is met, the compressor is switched off. The pump and fan overrun.
S.125 Heating: Immersion heater active	The immersion heater is used in heating mode.
S.132 Domestic hot water: Compressor blocked	The compressor is blocked for domestic hot water mode because the heat pump is outside of the application limits.
S.133 Domestic hot water: Prerun	The start conditions for the compressor in domestic hot water mode are checked. Start the other actuators for domestic hot water mode.
S.134 Domestic hot water: Compressor active	The compressor works in order to meet the domestic hot water demand.
S.135 Domestic hot water: Immersion heater active	The immersion heater is used in domestic hot water mode.
S.137 Domestic hot water: Overrun	The domestic hot water demand is met, the compressor is switched off. The pump and fan overrun.
S.141 Heating: Immersion heater shutdown	The heat demand is met, the immersion heater is switched off.
S.142 Heating: Immersion heater blocked	The immersion heater is blocked for heating mode.
S.151 Domestic hot water: Immersion heater shutdown	The domestic hot water demand is met, the immersion heater is switched off.
S.152 Domestic hot water: Immersion heater blocked	The immersion heater is blocked for domestic hot water mode.
S.173 Anti-cycling time for the energy supply company	The mains voltage supply is interrupted by the energy supply company. The maximum anti-cycling time is set in the configuration.
S.176 External electrical power limitation is active	The heat pump or the electric back-up heater is limited by the energy supply company.
S.202 Check programme: Purging of building circuit active	The building circuit pump is actuated in cyclical intervals, alternately in heating mode and domestic hot water mode.
S.203 Actuator test active	The sensor and actuator test is currently operating.
S.212 Connection fault: Control not recognised	System control was previously detected but the connection is broken. Check the eBUS connection to the system control. It can only be operated with the heat pump's additional functions.
S.240 Compr. oil temp. too low, environment too cold	The compressor heating is switched on. The unit does not start up.
S.252 Fan unit 1: Fan blocked	If the fan speed is 0 rpm, the heat pump is switched off for 15 minutes and then restarted. If the fan does not start up after four unsuccessful restarts, the heat pump is switched off and the fault message F.718 is displayed.
S.255 Fan unit 1: Air inlet temp. too high	The compressor does not start because the outdoor temperature at the fan is above the application limits. Heating mode: > 43 °C. Domestic hot water mode: > 43 °C. Cooling mode: > 46 °C.

Code	Meaning
S.256 Fan unit 1: Air inlet temp. too low	The compressor does not start because the outdoor temperature at the fan is below the application limits. Heating mode: < -20 °C. Domestic hot water mode: < -20 °C. Cooling mode: < 15 °C.
S.260 Fan unit 2: Fan blocked	If the fan speed is 0 rpm, the heat pump is switched off for 15 minutes and then restarted. If the fan does not start up after four unsuccessful restarts, the heat pump is switched off and the fault message F.785 is displayed.
S.272 Building circuit: Remaining feed head limit active	The remaining feed head that is set under the configuration is reached.
S.273 Building circuit: Flow temperature too low	The flow temperature that is measured in the building circuit is below the application limits.
S.275 Building circuit: Flow rate too low	Building circuit pump defective. All consumers in the heating system are closed. The values fall below the specific minimum volume flows. Check that the dirt filter is permeable. Check the stopcocks and thermostatic valves. Ensure that the flow rate is at least 35% of the nominal flow rate. Check that the building circuit pump functions correctly.
S.276 Building circuit: Lock-out contact S20 open	Contact S20 is open at the heat pump's main PCB. Incorrect limit thermostat setting. Flow temperature sensor (heat pump, gas-fired boiler, system sensor) measures values that deviate downwards. Adjust the maximum flow temperature for the direct heating circuit via the system control (observe the upper switch-off threshold for the boilers). Adjust the set value for the limit thermostat. Check the sensor values
S.277 Building circuit: Pump fault	If the building circuit pump is inactive, the heat pump is switched off for 10 minutes and is then restarted. If the building circuit pump does not start up after three unsuccessful restarts, the heat pump is switched off and the fault message F.788 is displayed.
S.280 Freq. converter fault: Compressor	The compressor motor or wiring is defective.
S.281 Freq. converter fault: Mains voltage	There is overvoltage or undervoltage.
S.282 Freq. converter fault: Overheating	If the cooling of the frequency inverter is not sufficient, the heat pump is switched off for one hour and then restarted again. If the cooling is not sufficient after three unsuccessful restarts, the heat pump is switched off and the fault message F.819 is displayed.
S.283 De-icing time too long	If the de-icing takes longer than 15 minutes, the heat pump is restarted. If the time for the de-icing is still not sufficient after three unsuccessful restarts, the heat pump is switched off and the fault message F.741 is displayed. ► Check whether sufficient heat energy is available from the building circuit.
S.284 De-icing flow temperature too low	If the flow temperature is below 5 °C, the heat pump is restarted. If the flow temperature is still not sufficient after three unsuccessful restarts, the heat pump is switched off and the fault message F.741 is displayed. ► Check whether sufficient heat energy is available from the building circuit.
S.285 Compressor outlet temperature too low	Compressor outlet temperature is too low
S.286 Hot gas temperature switch open	If the hot gas temperature is above 119 °C +5 K, the heat pump is switched off for one hour and then restarted again. If the hot gas temperature has not fallen after three unsuccessful restarts, the heat pump is switched off and the fault message F.823 is displayed.
S.287 Fan 1: Wind	Before starting, the fan rotates at a speed of 50 rpm or higher. This may be caused by a strong outside wind.
S.288 Fan 2: Wind	Before starting, the fan rotates at a speed of 50 rpm or higher. This may be caused by a strong outside wind.
S.289 Current limit active	The outdoor unit's power consumption is reduced, the compressor speed is reduced. The compressor's operating current exceeds the limit value that is set under the configuration. (for 3 kW, 5 kW, 7 kW units: <16 A; for 10 kW, 12 kW units: <25 A)
S.290 Switch-on delay active	The compressor's switch-on delay is active.
S.302 High-pressure switch open	If the pressure in the refrigerant circuit exceeds the application limit, the heat pump is switched off for 15 minutes and is then restarted again. If the pressure remains too high after four unsuccessful restarts, the fault message F.731 is displayed.
S.303 Compressor outlet temperature too high	The operating characteristics have been exited. The heat pump is restarted.
S.304 Evaporation temperature too low	The operating characteristics have been exited. The heat pump is restarted.
S.305 Condensation temperature too low	The operating characteristics have been exited. The heat pump is restarted.
S.306 Evaporation temperature too high	The operating characteristics have been exited. The heat pump is restarted.
S.308 Condensation temperature too high	The operating characteristics have been exited. The heat pump is restarted.
S.312 Building circuit: Return temperature too low	Return temperature in the building circuit too low for compressor to start. Heating: Return temperature < 5 °C. Cooling: Return temperature < 10 °C. Cooling: Check that the 4-port diverter valve works correctly.

Code	Meaning
S.314 Building circuit: Return temperature too high	Return temperature in the building circuit too high for the compressor to start. Heating: Return temperature > 56 °C. Cooling: Return temperature > 35 °C. Cooling: Check that the 4-port diverter valve works correctly. Check the sensors.
S.351 Immersion heater: Flow temp. too high	The flow temperature at the immersion heater is too high. Flow temperature > 75 °C. The heat pump is switched off.
S.516 De-icing mode active	The heat pump de-ices the outdoor unit's heat exchanger. The heating mode is interrupted. The maximum de-icing time is 16 minutes.
S.575 Frequency converter: Internal fault	An internal electronics fault is present on the outdoor unit's inverter PCB. If this occurs three times, fault message F.752 appears.
S.581 Connection fault: Frequency converter not recognised	Missing communication between the frequency converter and the outdoor unit's PCB. After this occurs three times, fault message F.753 appears.
S.590 Fault: 4-port valve position not correct	The 4-port diverter valve does not move fully to the heating or cooling position.

G Maintenance messages

Code	Meaning	Cause	Remedy
M.23	Status external current anode	External current anode not recognised	If required, check for a cable break
M.32	Building circuit: Waterpress. Low	- Pressure loss in the building circuit due to leakages or air pockets - Building circuit pressure sensor is defective	- Check the building circuit for leaks, top up with heating water and purge - Check the plug contact on the PCB and on the wiring harness; check that the pressure sensor is working correctly and, if required, replace the pressure sensor
M.200	Building circuit : Brine pressure low	- Pressure loss in the building circuit due to leakages or air pockets - Building circuit pressure sensor is defective	- Check the building circuit for leaks, top up with heating water and purge - Check the plug contact on the PCB and on the wiring harness; check that the pressure sensor is working correctly and, if required, replace the pressure sensor
M.201	Sensor fault: Cylinder temperature	Cylinder temperature sensor defective	Check the plug contact on the PCB and on the wiring harness; check that the sensor is working correctly and, if required, replace the sensor
M.202	Sensor fault: System temperature	System temperature sensor defective	Check the plug contact on the PCB and on the wiring harness; check that the sensor is working correctly and, if required, replace the sensor
M.203	Connection fault: Disp. not recognised	- Display defective - Display not connected	- Check the quality of the plug contact on the PCB and on the wiring harness - Replace the display, if required

H Comfort protection mode

Code	Meaning	Description	Remedy
200	Sensor fault: Temp. air inlet	Still possible to operate with existing, functional outdoor temperature sensor	Replace the air inlet sensor

I 5.4 kW back-up heater at 230 V and at 400 V

Internal control of the output levels at 230 V and at 400 V	Power consumption	Set value
0	0.0 kW	
1	0.7 kW	1 kW
2	1.2 kW	
3	1.8 kW	2 kW
4	2.2 kW	3 kW
5	3.2 kW	
6	3.8 kW	4 kW
7	4.7 kW	5 kW
8	5.4 kW	6 kW

J Inspection and maintenance work

#	Maintenance work	Interval	
1	Checking the pre-charge pressure of the expansion vessel	Annually	39
2	Check that the prioritising diverter valve can move easily (visually/audibly)	Annually	
3	Checking the electronics boxes, removing dust from the ventilation slits	Annually	

K Characteristic values for the internal temperature sensors, hydraulic circuit

Sensors: TT620 TT650

Temperature (°C)	Resistance (ohms)
0	33400
5	25902
10	20247
15	15950
20	12657
25	10115
30	8138
35	6589
40	5367
45	4398
50	3624
55	3002
60	2500
65	2092
70	1759
75	1486
80	1260
85	1074
90	918
95	788
100	680
105	588
110	510

L Characteristic values for the VR10 internal temperature sensors, cylinder temperature

Temperature (°C)	Resistance (ohms)
-40	88130
-35	64710
-30	47770
-25	35440
-20	26460
-15	19900
-10	15090
-5	11520
0	8870
5	6890
10	5390
15	4240
20	3375
25	2700
30	2172
35	1758
40	1432
45	1173
50	966
55	800
60	667
65	558
70	470
75	397
80	338
85	288
90	248
95	213
100	185
105	160
110	139
115	122
120	107
125	94
130	83
135	73
140	65
145	58
150	51

M Characteristic values for the VRC DCF outdoor temperature sensor

Temperature (°C)	Resistance (ohms)
-25	2167
-20	2067
-15	1976
-10	1862
-5	1745
0	1619
5	1494
10	1387
15	1246
20	1128
25	1020
30	920
35	831
40	740

N Technical data



Note

The following performance data is only applicable to new products with clean heat exchangers.

Technical data – General

	VWZ MEH 97/6
Product dimensions, width	440 mm
Product dimensions, height	720 mm
Product dimensions, depth	350 mm
Weight, without packaging	20 kg
Weight, ready for operation	28 kg
IP rating	IP 10B
Heating circuit connections	G 1"
Heat source connections	G 1 1/4"

Technical data – Heating circuit

	VWZ MEH 97/6
Material in the heating circuit	Copper, copper-zinc alloy, stainless steel, ethylene propylene diene monomer rubber, brass, steel, composite materials
Permissible water composition	Technical data calculated without frost or corrosion protection. Soften the heating water at water hardnesses from 3.0 mmol/l (16.8° dH) in accordance with Directive VDI2035 sheet 1
Water content	8 l
Volume of the internal diaphragm expansion vessel	10 l
Max. heating mode flow temperature with compressor	75 °C

	VWZ MEH 97/6
Max. heating mode flow temperature with back-up heater	75 °C
Min. cooling mode flow temperature	7 °C
Sound power A7/W35 in accordance with EN 12102 / EN 14511 L _{WA} in heating mode	≤ 29 dB(A)
Sound power A7/W45 in accordance with EN 12102 / EN 14511 L _{WA} in heating mode	≤ 29 dB(A)
Sound power A7/W55 in accordance with EN 12102 / EN 14511 L _{WA} in heating mode	≤ 29 dB(A)
Sound power A7/W65 in accordance with EN 12102 / EN 14511 L _{WA} in heating mode	≤ 29 dB(A)
Sound power A35/W7 in accordance with EN 12102 / EN 14511 L _{WA} in cooling mode	≤ 29 dB(A)
Sound power A35/W18 in accordance with EN 12102 / EN 14511 L _{WA} in cooling mode	≤ 30 dB(A)

Technical data – Electrics

	VWZ MEH 97/6
Rated voltage	230 V (+10%/-15%), 50 Hz, 1~/N/PE
Rated voltage	400 V (+10%/-15%), 50 Hz, 3~/N/PE
Rated power, maximum	8.6 kW
Rated current, maximum, 230 V	23.5 A
Rated current, maximum, 400 V	13.6 A
Overvoltage category	II
Fuse type, 230 V	C characteristics, slow-blow
Fuse type, 400 V	C characteristics (slow-blow), 3-pole switching

Index

A

Actuator test	37
Actuators, checking	37
Article number	21

B

Basic diagram	17
Building circuit connections	25

C

Cable duct	26
Calling up, code layer	35
Calling up, installer level	35
Calling up, statistics	35
CE marking	21
Check programmes	37
Checking, electrical installation	31
Checking, filling pressure, heating installation	39
Checking, high-pressure switch-off	39
Checking, maintenance message	38
Checking, service message	38
Circulation pump, connecting	30
Code layer, calling up	35
Comfort protection mode	38
Competent person	17
Component test	37
Cooling mode, activating	36
Cylinder connection	24

D

Data plate	21
Decommissioning	40
Displaying, Live Monitor	37
Displaying, status codes	37
Disposal, accessories	40
Disposal, product	40
Domestic hot water temperature Risk of scalding	17

E

Electric back-up heater, enabling	34
Electric back-up heater, maximum output	34
Electrical installation, checking	31
Electricity	17
Expansion relief valve	25
Expansion vessel, pre-charge pressure	39

F

Factory settings, restoring	37
Fault codes	37
Fault memory	37
Fault symbol	37
Filling and purging	32
Filling pressure, checking, heating installation	39
Filling pressure, displaying	36
Flow temperature, setting, heating mode	36
Frost	18
Frost protection function	19
Function menu	37

H

High-pressure switch-off	39
--------------------------------	----

I

Inspection	38
Inspection work	39
Installation assistant	33, 35
Installation clearances	23
Installer level, calling up	35

Intended use	17
--------------------	----

L

Live Monitor, displaying	37
Low-water pressure protection	19

M

Maintenance	38
Maintenance message, checking	38
Maintenance work	39
Minimum clearances	23

O

Operating concept	31
-------------------------	----

P

Parameters, resetting	37
Power supply	26
Pre-charge pressure, expansion vessel	39
Preparing the repair work	37
Product, switching on	33

Q

Qualification	17
---------------------	----

R

Regulations	18
Reset	37

S

Safety cut-out	19
Safety device	17
Screed drying, function	35
Self-test	37
Sensor test	37
Serial number	21
Service message, checking	38
Service partner	37
Setting, flow temperature, heating mode	36
Spare parts	38
Statistics, calling up	35
Status codes, displaying	37
Switching on, product	33

T

Test menu	37
Test operation	39
Tool	18
Transport	18
Treating the heating water	32

U

Unit configuration, checking	35
------------------------------------	----

V

Voltage	17
---------------	----

W

Weight	23
Wiring	30

Supplier**Vaillant Ltd.**

Nottingham Road ■ Belper ■ Derbyshire ■ DE56 1JT

Telephone 0330 100 3143

info@vaillant.co.uk ■ www.vaillant.co.uk



0020291544_03

Publisher/manufacture**Vaillant GmbH**

Berghauser Str. 40 ■ D-42859 Remscheid

Tel. +49 2191 18 0 ■ Fax +49 2191 18 2810

info@vaillant.de ■ www.vaillant.de

© These instructions, or parts thereof, are protected by copyright and may be reproduced or distributed only with the manufacturer's written consent.

Subject to technical modifications.